# Scantech ID Shuttle<sup>c</sup> SG-15<sup>colour</sup>

SCANTECH ID

## **Price Checker**

Highlight: Web Price Checker Application



SG-15Colour Web Price Checker Application Configuration V1.1.doc

Home Current Lo	System	Applications s/Web Price Check	Peripherals	Logout	
Web	Price Che	ecker			1.3.
Start Page file:///apps/c	onfig/skweb_weld	come.{@SKTYPE}.h	ıtml		
Welcome Page file:///apps/c	:onfig/skweb_weld	come.{@SKTYPE}.h	ıtml		
Welcome Timer					
Query Url http://www.i-	rk.nl/SG-15Colour	rDemoWebPriceCh	ecker/ {@BARCODE]	}	
Error Page file:///apps/c	:onfig/skweb_erro	or.{@SKTYPE}.html			
Allow URL On Darcodes					
Accepts					
1D Barcodes On					
2D Barcodes Off					
RFID Tags Off					
Others Off					
Verify					
Server On Certificate					
Enable Javascript On					
					Analyl Carry
					Apply Cancel

#### Chapter 5.7 Web Price Checker

#### Introduction

The web based price-checker uses a web-kit library to setup a browser-like connection to an http server. When an EAN barcode is scanned, the SG- $15^{\text{Colour}}$  will send the scanned data as an HTTP request to a web server. The web server is responsible for generating the HTML page with Article/Price/Picture content, which is sent to the SG- $15^{\text{Colour}}$ . The web-kit utility executing on the SG- $15^{\text{Colour}}$  will interpret and show the content on the display.

#### 1. Start Page

Default, the URL of the **Start** Page and **Welcome** Page are defined as HTML files residing on the SG-15<sup>colour</sup>. The **Start** page is only displayed at start-up of the Web-Price-Checker application. Having these files local on the SG-15 guarantees that the SG-15 starts with a non-empty page (even if the web-server is temporary out of service). For making the SG-15<sup>colour</sup> refer to the **Start** and **Welcome** page belonging to the web server demo, change the URLs to *http://192.137.81.60/auth/skweb\_start.html* and *http://192.137.81.60/auth/skweb\_welcome.html* 

#### 2. Welcome Page

The welcome page shown in between barcode scans when the SG-15<sup>Colour</sup> is in idle state. The URL may refer to a local file or to an external (web) server.

#### 3. Welcome Timer

After a product scan action and a successful article look-up, the server replies with an article description, price etc. This information is displayed on the screen for the number of seconds specified in the **Welcome Timer** field. When this timer times out, the SK enters an idle state and normally it will re-display the Welcome Message, but it is also possible to let the **PromoTool** application take over the display from the **Price-Checker**. For this the **skpromo** needs to run simultaneously with **skpricechecker**, see page **DeskTop Configurator**.

#### 4. Error Page

The Error Page URL is an option to specify a customized error message.

### 5. Query URL

For every barcode scan, the SK must send a query URL with the requested barcode information to the web-server.

The Web-Price-Checker uses tag-variables in the URL for this, like for example:

http://192.137.81.60/auth/tbl\_products/scan/{@BARCODE}/{@SKTYPE}

When scanning an EAN13 barcode **5029053021454** on a SK-50, the URL request with variables, *{@SKTYPE}* and *{@BARCODE}* will be reformatted and send to the web server as:

http://192.137.81.60/auth/tbl\_products/scan/5029053021454/SG15

Note that the sequence of the variables {@BARCODE} and {@SKTYPE} in the specified URL, is one to one related with the search path on the web server.

#### 6. Allow URL barcodes

This feature is useful for scanning 2D-barcodes on products or leaflets with 2D-barcodes that represent a URL referring directly to a site on the internet or intranet. When this feature is ON and your SG-15<sup>Colour</sup> is equipped with a 2D-scanengine, then scanning the QR-code here below will show the following response on the display:

QR-code with URL

http://www.scantech-id.com/en/products/list.php?pin=3aa3cded3eacb975929df79009da68fd&type=s

Scan QR code





#### Notes:

- 1. This requires the following settings:
  - i. Allow URL barcodes = ON
  - ii. 2D barcodes = ON
  - iii. The SK is equipped with 2D scan-engine.
- DNS must be activated on SK (i.e. DHCP service is responsible for providing a name server).

#### 7. URL tag-variables recognized by the URL parser

Tags according {@}	@} Description:	
BARCODE	Barcode as read by scan-engine (without identifiers)	Mandatory
SKTYPE	Type of ScanKiosk: SK40, SK50 or SG-15 <sup>Colour</sup>	Optional
WIDTH	Pixel width of the skweb-screen	Optional
HEIGHT	Pixel height of the skweb-screen	Optional
ID	Label Identifier for barcode symbologies	Optional <sup>*1</sup>

<sup>\*1</sup> For now, any scanned item is sent without identifier.

#### Notes

- 1. The web server is responsible for generating a web page response that fits on the SG-15<sup>Colour</sup> display (320X240). Side scroll-bars will appear on the display when the page is larger than the actual display.
- 2. The default template files *skweb\_start.html* and *skweb\_welcome.html* are displayed correctly on an SG-15<sup>Colour</sup>.
- 3. To leave the Web-Price-Checker application, you need to scan the special barcode (Close Application and Go to Desktop) in Appendix N.
- 4. New configuration settings become effective only after a restart of Web Price Checker.
- 5. On request, Scantech-ID provides an open source **Web Server Demo** application XAMPP that installs on a standard PC/Laptop, running Windows or Linux. This demo application contains a small SQL-database which is accessed through an Apache web server. This demo application contains a small database which can be used for web price-checking and web promotion (simultaneously).