



Setting BT name and password

1. Connecting the PC with printer by serial or usb port, turn on the power.


2. Entering into my PC, open the CD, then “Tools” , then “PRINTER SETTING SOFTWARE” , then “POS-TEST” ,as below pic:

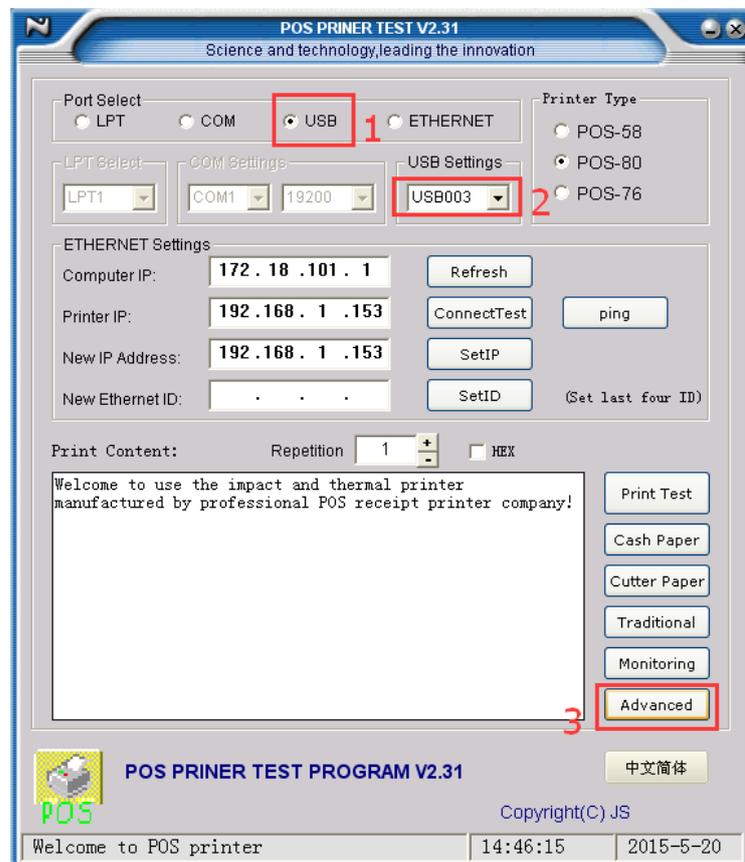

3. Click “Advanced”, as below pic:

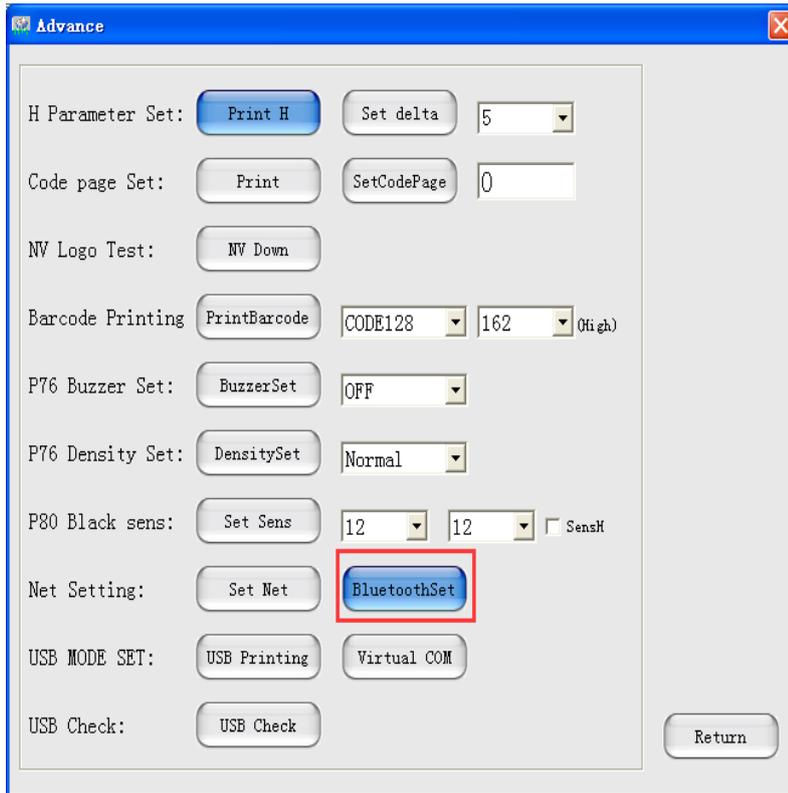

4. Click “BluetoothSet” , as below pic:

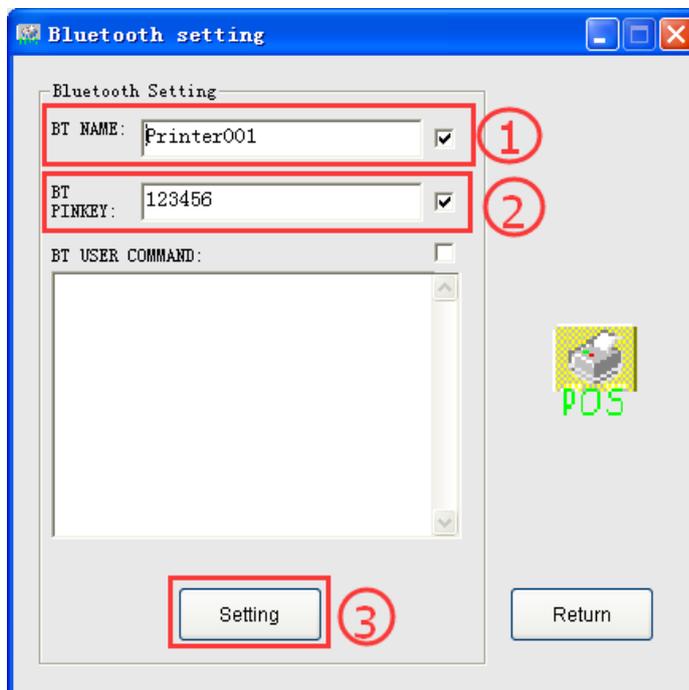

- ① Input BT name
- ② Input password
- ③ Click”Setting”

5. Power off printer, pressing “FEED” and power on, release your

hand from "FEED" once printer beeping, you will get a self test as below pic:



Printer set success as above pic!