



METROLOGIC INSTRUMENTS, INC.

**MetroSelect®**  
**Configuration Guide**

## Copyright

© 2005 by Metrologic Instruments, Inc. All rights reserved. No part of this work may be reproduced, transmitted, or stored in any form or by any means without prior written consent, except by reviewer, who may quote brief passages in a review, or provided for in the Copyright Act of 1976.

Products and brand names mentioned in this document are trademarks of their respective companies.

# TABLE OF CONTENTS

---

## Introduction

Symbol Key .....	ix
------------------	----

## Bar Code Configuration Methods

Single-Code Method .....	x
Multi-Code Method .....	x

## Need to Start Over?

Recall Defaults .....	xi
-----------------------	----

## Section A: Code Types and Decode Rules

UPC/EAN .....	1
Code 128 .....	3
Code 39 .....	4
Interleaved 2 of 5 .....	6
Standard 2 of 5 .....	9
Other 2 of 5 Codes .....	10
Codabar .....	12
Code 93 .....	13
Code 11 .....	13
Telepen .....	14
Plessey Codes .....	15
Other Decode Features .....	17
Configurable Code Lengths .....	18
RSS 14 Features .....	21
RSS Limited Features .....	23
RSS Expanded Features .....	25

## Section B: Supplements

Two Digit Supplements/Redundancy .....	1
Five Digit Supplements/Redundancy .....	1
Supplements Required/Not Required .....	2
Remote Supplemental Requirement .....	2
Bookland (978) Supplement Required .....	3
977 (2 Digit) Supplement Required .....	3

## TABLE OF CONTENTS

---

378/379 French Supplement Requirement.....	3
434/439 German Supplement Required.....	4
414/419 German Supplement Required.....	4
# System 2 Requires Supplements .....	4
# System 5 Requires Supplements .....	5
8711685 Requires 5-Digit Supplements.....	5
Coupon Code 128 .....	5
Code 128 Group Separators .....	6
Code 128 'JC1' Extended Code Format.....	6
100 msec to Find Supplemental.....	6
200 msec to Find Supplemental.....	6
400 msec to Find Supplemental.....	7
Code ID's with Supplements .....	7
Allow 2/5 on 977 Bar Code.....	7
Allow 2 on 977 Bar Code.....	7
Beep Once/Twice on Supplements .....	8
ISBN Check Digit Transmission .....	8
Bookland to ISBN Conversion .....	9
ISBN Re-Formatting .....	9
ISSN Check Digit Transmission .....	10
ISSN Re-Formatting .....	10
977 to ISSN Conversion.....	10
Number System 4 Coupon Code 128.....	11
UPC Discard.....	11
Supplements and UPC in Same Line.....	11

### **Section C: Communications**

Enable RS-232 .....	1
Load Keyboard Wedge Defaults.....	1
Enable Light Pen/Wand Communication.....	1
Enable Keyboard Wedge Emulation.....	1
Enable Stand-Alone Keyboard Scanner.....	1
Load OCIA Defaults.....	2
Enable OCIA Output.....	2

# TABLE OF CONTENTS

---

Load IBM 46xx Defaults .....	2
Enable IBM 46xx Communication .....	2
Low Speed USB .....	3
Enable No Communication Mode .....	3
Reserved .....	3

## **Section D: Scanner Operation**

Configuration Mode Options .....	1
Scan Buffers .....	2
Redundant Scans .....	4
Miscellaneous Decode Features .....	6
Depth of Field Adjustments .....	7
Same Symbol Time Outs .....	8
Barcode Absence .....	9
LED Options .....	10
Beeper Options .....	12
Inter-Character Data Transmission Delays .....	17
Inter-Record Data Transmission Delays .....	18
Communication Time Out Options .....	19
Host Scanner Commands .....	21
Power Save Modes .....	26
Japanese Double Field Support .....	30
Test Modes .....	35

## **Section E: Prefixes/Suffixes**

Configurable Prefixes, All Data .....	1
Configurable ID Characters, Code Specific .....	3
Identifiers Character .....	3
Standard Prefix Characters .....	8
Standard Suffix Characters .....	14
Longitudinal Redundancy Check (LRC) .....	16
Configurable Suffixes, All Data .....	17
Special Formats .....	20
Character Replacements .....	21

## TABLE OF CONTENTS

---

### Section F: Code Formatting

UPC/EAN.....	1
Codabar.....	5
Code 39.....	7
Code 11.....	9
Telepen.....	9
Plessey.....	10
2 of 5.....	12

### Section G: RS-232

Enable RS-232 Mode.....	1
Parity Features.....	2
Baud Rates.....	3
Data/Stop Bits.....	5
Hardware Handshaking.....	6
Software Handshaking.....	9
Miscellaneous.....	12

### Section H: Keyboard

Enable Keyboard Emulation.....	1
Country/Scan Code Table Selects.....	2
Keyboard/System Type.....	4
Special Keyboard Features.....	5
Inter-Scan Code Delays.....	9
Control Sets.....	10
3151 Terminal Keyboard.....	12

### Section I: OCIA

Load OCIA Defaults.....	1
Enable OCIA.....	1
DTS/Siemens.....	1
DTS/Nixdorf.....	1
NCR-S.....	1
NCR-F.....	1

# TABLE OF CONTENTS

---

## **Section J: Light Pen/Laser Emulation**

Enable Light Pen Mode .....	1
Space/Bar Height .....	1
Transmit Code 39 .....	1
Transmit as Scanned.....	1
Poll Light Pen Source .....	2
Light Pen Extra Toggle .....	2
10x Narrow Element Border .....	2
50x Narrow Element Border .....	2
Set Narrow Element Width .....	3
Laser Emulation.....	3

## **Section K: IBM 46xx Configuration**

Enable IBM 46xx Communication .....	1
Load IBM 46xx Defaults .....	1
IBM Ports.....	1
IBM Reserve Codes .....	2

## **Section M: Code Bytes**

Code Byte Usage .....	1
Code Bytes 0-5.....	2
Code Bytes 6-9.....	3
Reserved Codes.....	4
Code Byte/Code Type Table .....	5
ASCII Reference Table.....	6
Extended Key Code Reference Table.....	11

## **Section N: Miscellaneous Features**

Custom Defaults .....	1
Serial Program Mode.....	4
Software/Serial Number .....	4

## **Section O: Auxiliary Port Controls**

Disable AUX Port.....	1
-----------------------	---

## TABLE OF CONTENTS

---

AUX Port and Secondary Device Data Formats	
When Using a Metrologic Device as a Secondary.....	1
When Using a Non-Metrologic RS-232 Device as a Secondary.....	3
Additional AUX Port Data Formats .....	4
AUX Port Baud Rates.....	6
AUX Port Parity .....	8
AUX Port Stop/Data Bits.....	9
Enable/Disable RTS/CTS Handshaking .....	10
Message AUX RTS/CTS .....	10
Character AUX RTS/CTS .....	10
Enable/Disable Port Mode 7.....	10
Enable/Disable D/E Commands .....	11
Enable/Disable F/L Commands.....	11
Enable/Disable M/O Commands .....	11
Enable/Disable XON/XOFF Handshaking .....	12
Enable/Disable ACK/NAK.....	12
AUX CTS/RTS Polarity.....	13
AUX Same Symbol Timeout.....	13
Main Output Port Auxiliary Data Formats .....	14
Inter-Character Delays .....	16

### Section P: USB

Full Speed USB.....	1
Low Speed USB .....	4

### Section R: IS3480 / MS3580 / MS3780

Button Modes .....	1
Button Click Delay .....	1
Primary and Secondary Scan Patterns .....	2
Sweet Spot Mode (IS3480) .....	3
CodeGate (IS3480 / MS3580).....	3
Depth of Field .....	3
IR Activation .....	4
TTL RS232 .....	4
CodeGate (MS3780) .....	5





## INTRODUCTION

---

Your new scanner has been configured at the factory with a set of default communication protocols. Since many host systems have unique formats and protocol requirements, Metrologic provides a wide range of configurable features that may be selected with the use of this bar code configuration guide.

Once the configuration is completed, the scanner stores the settings in nonvolatile memory or NOVRAM. NOVRAM saves the settings when the power is turned off.

Symbol Key	
* (asterisk)	Default Feature
~ (tilde)	Feature requires the <i>Multi-Code Configuration Method</i> , see <i>Bar Code Configuration Methods on page x</i> .
	Important!
	Note

## BAR CODE CONFIGURATION METHODS

---

Metrologic scanners can be bar code configured in two ways: the *Single-Code Method* and the *Multi-Code Method*.

### **Single-Code Method**

Most features can be enabled or disabled using the Single-Code Method.

1. Power up the scanner.
2. Scan the bar code(s) for the desired feature(s).
3. Observe a multi-toned, “save setting” beep that indicates the configuration has been saved to NOVRAM.

### **Multi-Code Method**

All features can be enabled or disabled using the Multi-Code Method. A feature marked with a “~” requires the Multi-Code Method.

1. Power up the scanner.
2. Scan the *Enter/Exit Configuration Mode* bar code. [3 beeps]
3. Scan the bar code(s) for the desired feature(s). [1 beep]
4. Scan the *Enter/Exit Configuration Mode* bar code [3 beeps] and save new configuration.

Enter/Exit Configuration Mode



To abort a configuration change, power off the scanner before scanning the *Enter/Exit Configuration Mode* bar code.

## NEED TO START OVER?

---

Scan the Recall Default bar code. This will erase all previous settings and return to the scanner's default communications protocol.

- Keyboard Wedge interface scanners will load keyboard wedge defaults.
- All other scanners will load RS-232 defaults.




Metrologic manufactures custom OEM scanners, which load the OEM's defaults. For further information on the affects they have on Metrologic default communications protocols refer to Section N, Custom Defaults.







\* Enable UPC/EAN

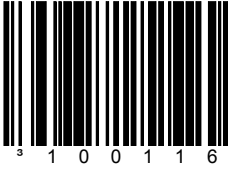


Disable UPC/EAN

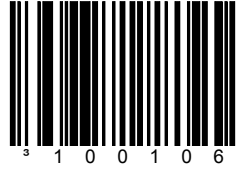


\* Enable UPC-A

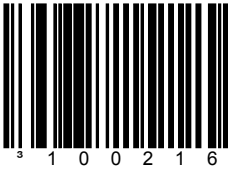


Disable UPC-A

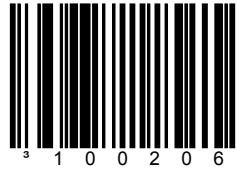

\* Enable UPC-E

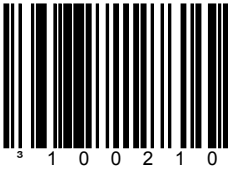


Disable UPC-E

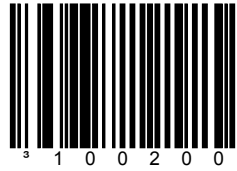


## SECTION A

## UPC/EAN


\* Enable EAN-13

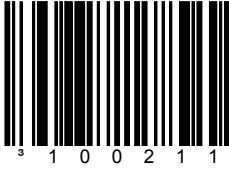




Disable EAN-13

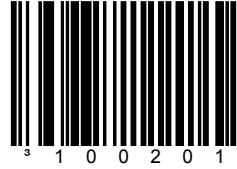


\* Enable EAN-8

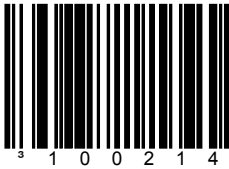

Disable EAN-8

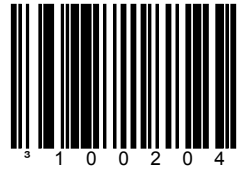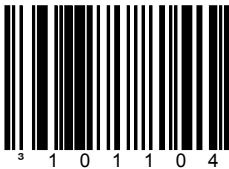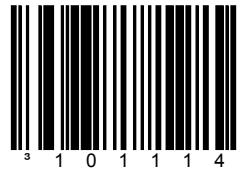\* Enable  
Auto Redundancy UPC-EDisable  
Auto Redundancy UPC-E


\* Enable Code 128

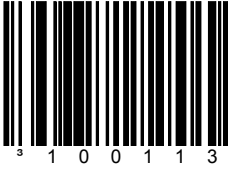


Disable Code 128



Enable  
UCC/EAN-28  
'J' Code Formatting

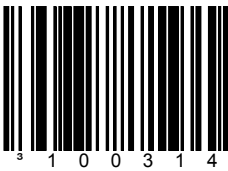

Disable  
UCC/EAN-128  
'J' Code Formatting

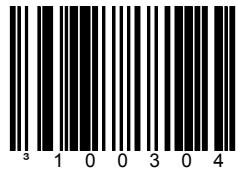


For Coupon Code 128, see Section B, page 5.



## SECTION A

## CODE 39


\* Enable Code 39

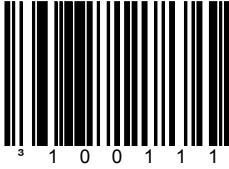


Disable Code 39

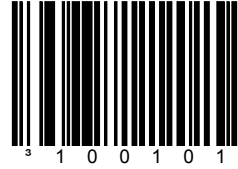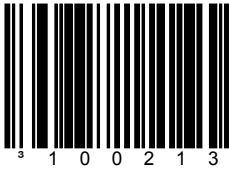Enable MOD 43  
Check on Code 39

The scanner will only scan Code 39 bar codes that have a valid Modulo 43 check digit.

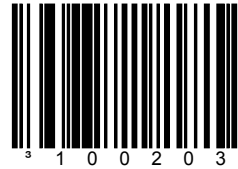\* Disable MOD 43  
Check on Code 39

The scanner will not test Code 39 bar codes for a modulo 43 check digit.

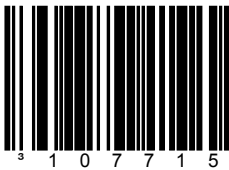Transmit Mode 43 Check  
Digit on Code 39


This feature works in conjunction with Mode 43 Check on Code 39. Both options must be enabled for this feature to work.

\* Do Not Transmit Mode 43  
Check Digit on Code 39

This option will not transmit Code 39's Mod 43 check character.




Enable Full ASCII Code 39

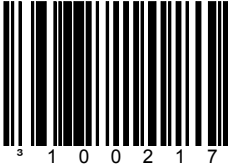


\* Disable Full ASCII Code 39



Enable PARAF Support  
(Italian Pharmaceutical Codes)

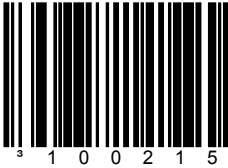


\* Disable PARAF Support

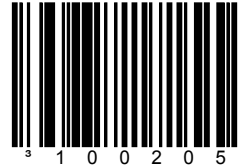


The scanner will convert  
Code 39 bar codes to  
PARAF format.

The scanner will not convert  
code 39 bar codes to  
PARAF format.

Enable TRI-OPTIC Code

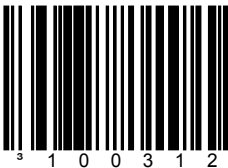

\* Disable TRI-OPTIC Code

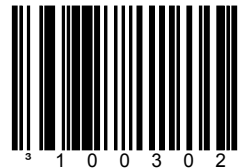

## SECTION A

## INTERLEAVED 2 OF 5


\* Enable Interleaved  
2 of 5 (ITF)



Disable Interleaved  
2 of 5 (ITF)




Enable MOD 10  
Check on ITF

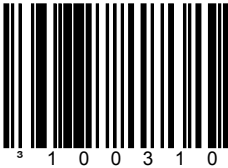


The scanner will only scan  
Interleaved 2 of 5 (ITF)  
Bar codes that have a  
Modulo 10 check digit.

\* Disable MOD 10  
Check on ITF

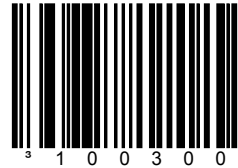


The scanner will not test  
Interleaved 2 of 5 (ITF)  
bar codes for a Modulo 10  
check digit.

Transmit MOD 10  
Check Digit on ITF

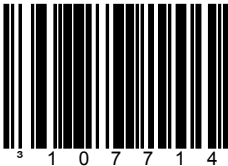


The scanner transmits  
Interleaved 2 of 5 (ITF)  
MOD 10 check character.

\* Do Not Transmit MOD 10  
Check Digit on ITF

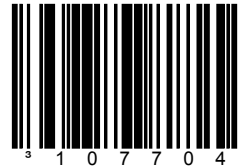


The scanner will not  
transmit Interleaved 2 of 5  
(ITF) MOD 10 check digit  
characters. This feature  
works in conjunction with  
Mod 10 Check on ITF. Both  
must be enabled for this  
feature to work.


Enable ALT  
Check Digit ITF

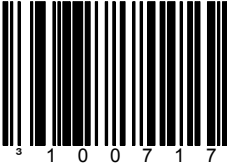


\* Disable ALT  
Check Digit ITF

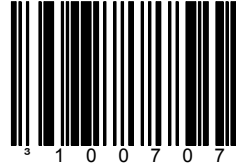

Enable 12 Digit ITF  
Check Digit at 1

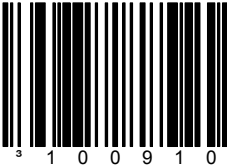


\* Normal Check Digit

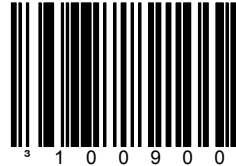

This feature requires  
*MOD 10 ITF Check Digit*  
to be enabled. The 12-  
character ITF check digit  
calculation will start with 1  
instead of 0.

Enable ITF/Code 39 Filter

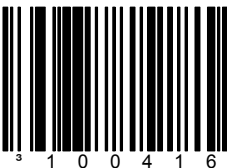

\* Disable ITF/Code 39  
Filter



Supports Code 39/ITF filters.




This feature may adversely  
affect reading Codabar,  
Code 93 and some other  
non-standard symbologies.

## SECTION A


## INTERLEAVED 2 OF 5

~ ITF Symbol Length  
Lock 1 †

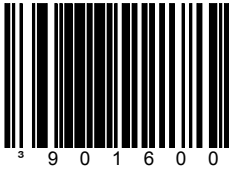


To specify a 1<sup>st</sup> ITF symbol length lock, scan the above bar code and the appropriate code bytes located in Section M.†

~ ITF Symbol Length  
Lock 2 †

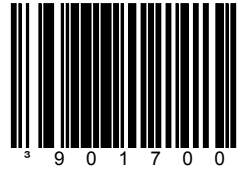

To specify a 2<sup>nd</sup> ITF symbol length lock, scan the above bar code and the appropriate code bytes located in Section M. †


~ ITF Minimum  
Symbol Length †

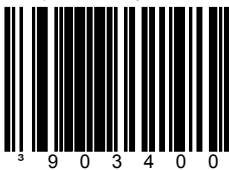


To specify a minimum number of ITF characters to be decoded, scan the above bar code and the appropriate code bytes located in Section M.†

† Refer to the Multi-Code Configuration Method on page x.


Enable  
Standard 2 of 5

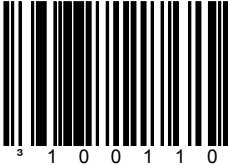

\* Disable  
Standard 2 of 5

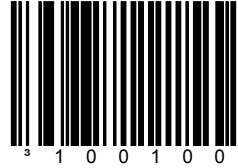

~ Standard 2 of 5  
Symbol Length Lock

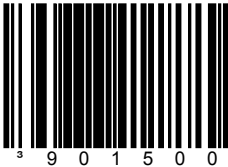


To specify a minimum number of ITF characters to be decoded, scan the above bar code and the appropriate code bytes located in Section M.†

† Refer to the Multi-Code configuration method on page x.




## SECTION A

## OTHER 2 OF 5 CODES


Enable Matrix 2 of 5

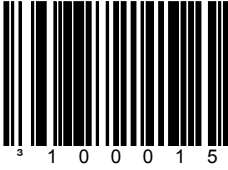

\* Disable Matrix 2 of 5

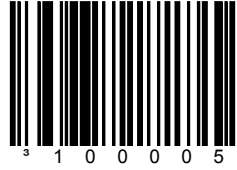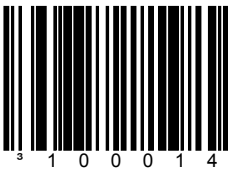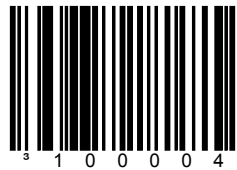Enable 15 Digit  
Airline 2 of 5\* Disable 15 Digit  
Airline 2 of 5


Enable 13 Digit  
Airline 2 of 5

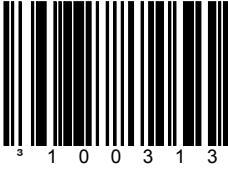


\* Disable 13 Digit  
Airline 2 of 5



Enable Hong Kong  
2 of 5

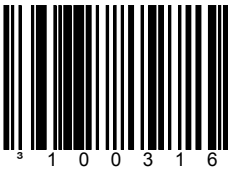


\* Disable Hong Kong  
2 of 5

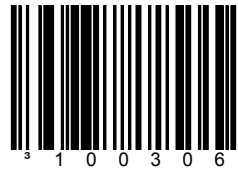




## SECTION A

## CODABAR

\* Enable Codabar

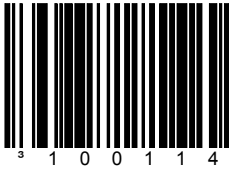


\* Disable Codabar

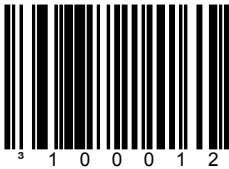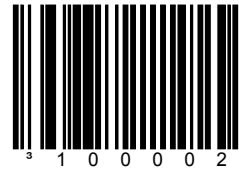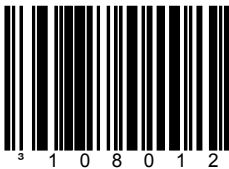Enable  
Dual Field Codabar\* Disable  
Dual Field CodabarEnable  
Tab in Dual Codabar\* Disable  
Tab in Dual Codabar

This feature requires *Dual Field Codabar* to be enabled. The scanner will insert a tab between the fields of the dual field Codabar.




\* Enable Code 93

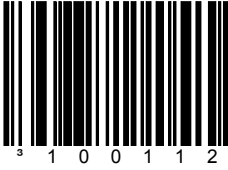


Disable Code 93



Enable Code 11

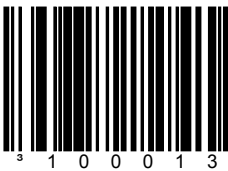


\* Disable Code 11

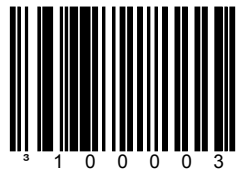


## SECTION A

## TELEPEN


Enable Telepen

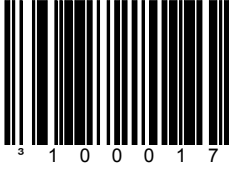


\* Disable Telepen

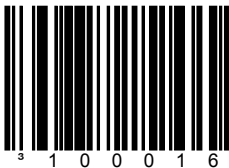Enable  
ALPHA Telepen\* Disable  
ALPHA Telepen


Enable MSI Plessey

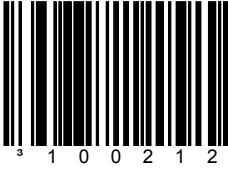

\* Disable MSI Plessey

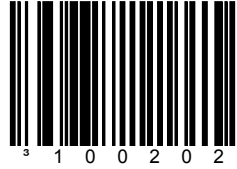


\* No MSI Plessey  
Check Digit

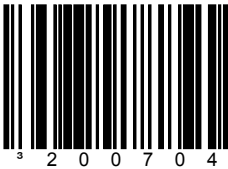


The scanner will not test  
MSI Plessey bar codes for a  
check digit.

Enable MSI Plessey  
MOD 10/10 Check Digit

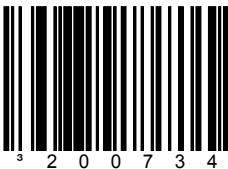

The scanner will test MSI  
Plessey bar codes for a  
double Modulo 10 check  
digit.

\* Enable MSI Plessey  
MOD 10 Check Digit

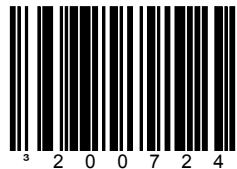

The scanner will test MSI  
Plessey bar codes for a  
single Modulo 10 check  
digit.

## SECTION A

## PLESSEY CODES

Transmit

MSI Plessey Check Digit



This option works in conjunction with one or both of the Enabled MSI Plessey Mode options.


\* Do Not Transmit

MSI Plessey Check Digit




The scanner will not transmit MSI Plessey check digit characters.

Enable UK Plessey

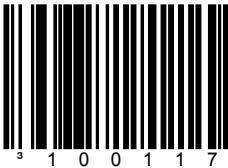


\* Disable UK Plessey

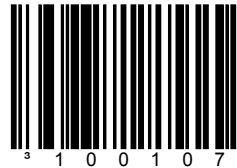

Enable UK Plessey

A to X Conversion

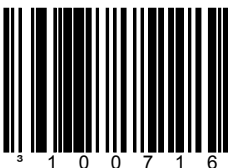


\* Disable UK Plessey


A to X Conversion




Enable Double Border  
Required/Large  
Inter-Character Space

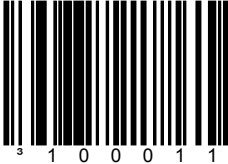

\* Disable Double Border  
Required/Large  
Inter-Character Space

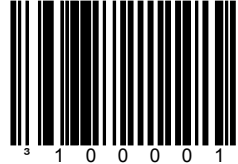


~ Minimum  
Symbol Length †

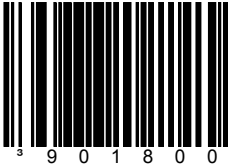

Omnidirectional default is 4.  
Combine this code with the  
proper Code Bytes, to  
specify the minimum  
number of characters in all  
non-UPC/EAN bar codes.†

~ Symbol Length Lock †

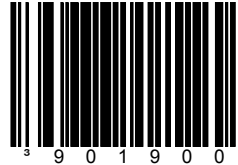

This code combined with the  
proper Code Bytes, locks the  
bar code's length into place.†

† Refer to the Multi-Code Configuration Method on page x.

## SECTION A


## CONFIGURABLE CODE LENGTHS

There are seven bar code lock lengths available. Specific code types can be assigned to a lock length using the *Multi-Code* configuration method.


**Example:**

1. Scan the enter/exit configuration bar code.
2. Scan the *code length lock #1* bar code.
3. Scan the three Code Bytes that represent the code length.
4. Scan the matching code type lock #1 bar code.
5. Scan the three code bytes that represent the code type.  
Refer to the *Code Type Table* in Section M.
6. Repeat steps 2 through 5 for lock lengths 2 through 7 if desired.
7. Scan the enter/exit configuration bar code when finished to save settings.


~ Code Length  
Lock #1

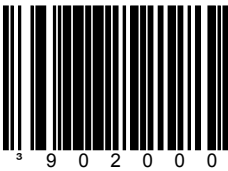


~ Code Type  
Lock #1

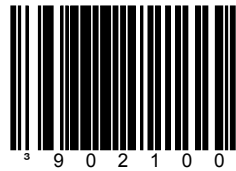


~ Code Length  
Lock #2

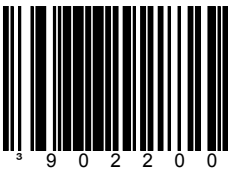


~ Code Type  
Lock #2

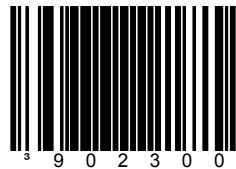

~ Code Length  
Lock #3

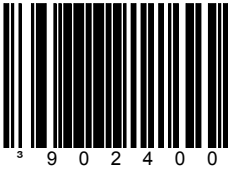


~ Code Type  
Lock #3

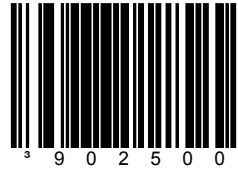

~ Code Length  
Lock #4




~ Code Type  
Lock #4

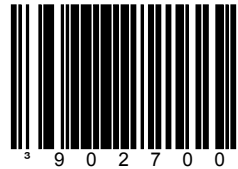

~ Code Length  
Lock #5




~ Code Type  
Lock #5

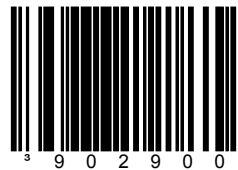


## SECTION A

## CONFIGURABLE CODE LENGTHS


~ Code Length  
Lock #6

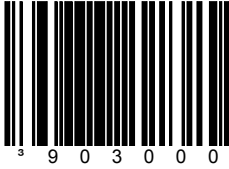


~ Code Type  
Lock #6

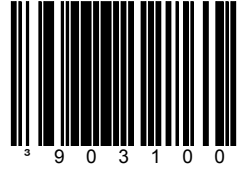

~ Code Length  
Lock #7

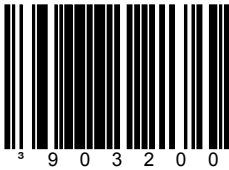


~ Code Type  
Lock #7

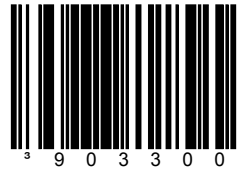





Enable RSS 14

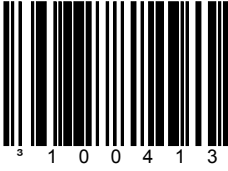

\* Disable RSS 14

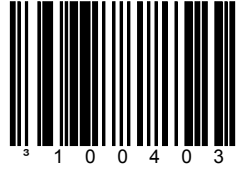

\* Transmit  
RSS 14 Check Digit

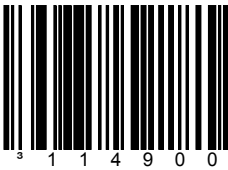

Do Not Transmit  
RSS 14 Check Digit




## SECTION A

## RSS 14 FEATURES

\* Transmit


RSS 14 Application ID

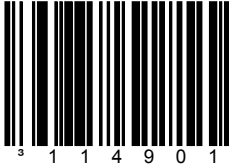

Application identifier "01" is transmitted by default.


Do Not Transmit

RSS 14 Application ID

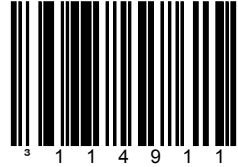

\* Transmit


RSS 14 Symbology ID

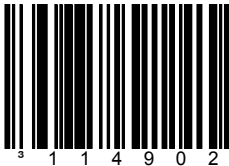


Symbology identifier "je0" is transmitted by default.

Do Not Transmit

RSS 14 Symbology ID

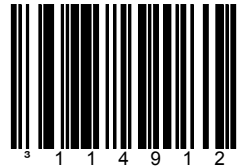


Enable RSS Limited

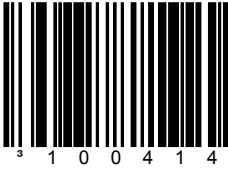

\* Disable RSS Limited



\* Transmit  
RSS Limited Check Digit

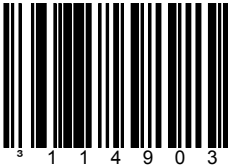


Do Not Transmit  
RSS Limited Check Digit



## SECTION A

## RSS LIMITED FEATURES

\* Transmit RSS Limited  
Application ID

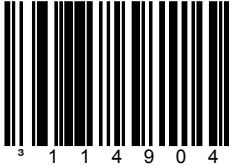


Application identifier "01" is  
transmitted by default.

Do Not Transmit  
RSS Limited Application ID




\* Transmit RSS Limited  
Symbology ID

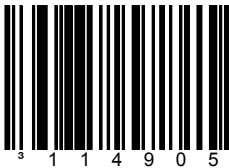


Symbology identifier "je0" is  
transmitted by default.


Do Not Transmit  
RSS Limited Symbology ID

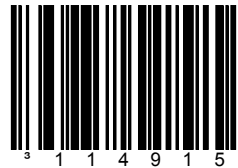


Enable RSS Expanded

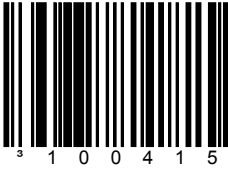

\* Disable RSS Expanded

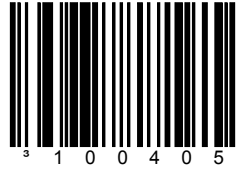

\* Transmit RSS  
Expanded Symbology ID

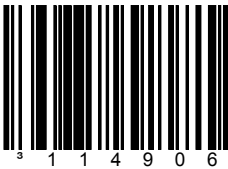


Do Not Transmit RSS  
Expanded Symbology ID




Symbology identifier "je0" is transmitted by default.




Enable Two Digit Supplements

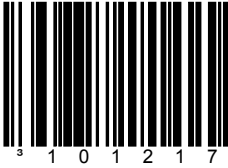


\* Disable Two Digit Supplements

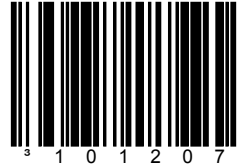

\* Enable Two Digit Redundancy

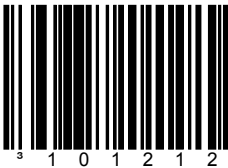


Disable Two Digit Redundancy

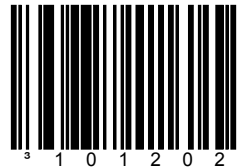


Twice before accepting data, the scanner will scan the bar code plus the two digit add on.

When scanned, will not implement the two digit redundancy feature.

Enable Five Digit Supplements

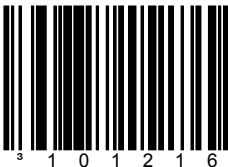


\* Disable Five Digit Supplements

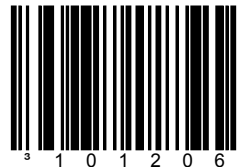

## SECTION B


## SUPPLEMENTS/REDUNDANCY

Enable Five Digit  
Redundancy

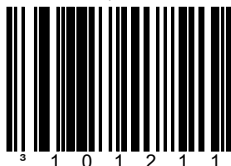


Twice before accepting  
data, the scanner will scan  
the bar code plus the five  
digit add on.

\* Disable Five Digit  
Redundancy

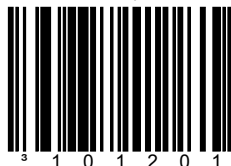


The scanner will not  
implement the five digit  
redundancy feature.

Supplements  
are Required

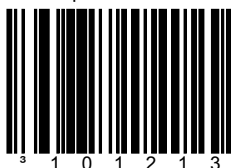


All UPC/EAN labels that are  
scanned must have a  
supplement.

\* Supplements are  
not Required

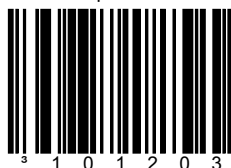


UPC/EAN labels do not  
require a supplement to be  
scanned.

Enable Remote  
Supplemental Requirement

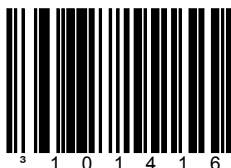

\* Disable  
Remote Supplemental  
Requirement

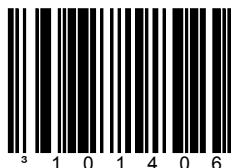





## SECTION B

## SUPPLEMENTS


Enable Bookland (978)  
Supplement Requirement

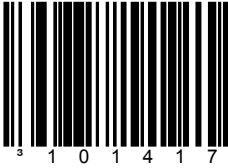

\* Disable Bookland (978)  
Supplement Requirement

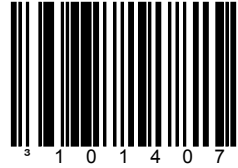


Enable 977 (2 digit)  
Supplemental Requirement

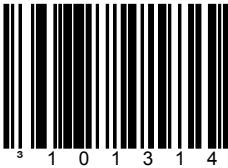


The scanner will require a 2 digit supplement be scanned when an EAN-13 code begins with 977.

\* Disable 977 (2 digit)  
Supplemental Requirement

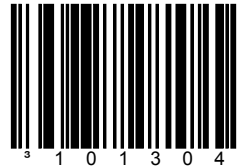


The scanner will not require a 2 digit supplement be scanned whenever an EAN-13 code begins with 977.

Enable 378/379 French  
Supplement Requirement

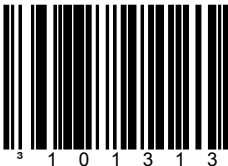


\* Disable 378/379 French  
Supplemental Requirement

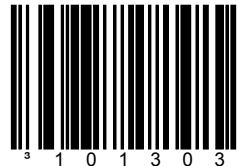


## SECTION B

## SUPPLEMENTS


Enable 434/439 German  
Supplemental Requirement

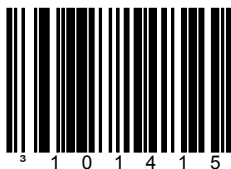


\* Disable 434/439  
German Supplemental  
Requirement

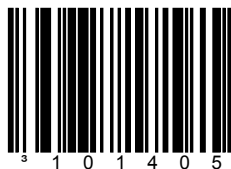


Enable 414/419 German  
Supplemental Requirement

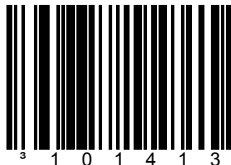


\* Disable 414/419 German  
Supplemental Requirement

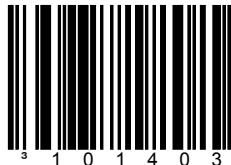


Enable # System 2  
Requires Supplements

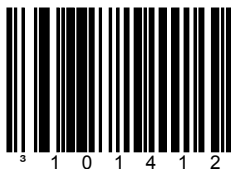


\* Disable # System 2  
Requires Supplements

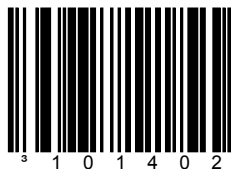


Enable # System 5 Requires Supplements

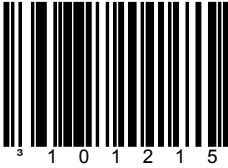

\* Disable # System 5 Requires Supplements

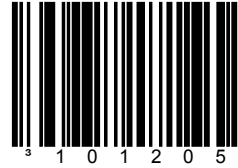

Enable 8711685 Requires 5-Digit Supplement

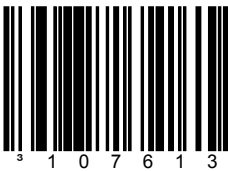

\* Disable 8711685 Requires 5-Digit Supplement




The scanner will require a 5-digit supplement to be scanned when an EAN-13 code begins with 8711685.

The scanner will not require a 5-digit supplement to be scanned when an EAN-13 code begins with 8711685.



This feature is not available with all models.

Enable Coupon Code 128

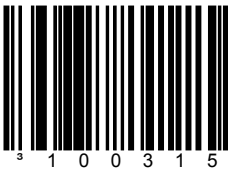


\* Disable Coupon Code 128



## SECTION B


## SUPPLEMENTS

Enable Code 128 'JC1'  
Extended Code Format

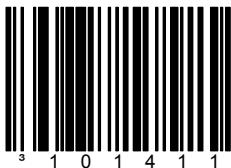


The scanner will transmit a 'JC1' at the beginning of the code 128 portion of the coupon code.

\* Disable Code 128 'JC1'  
Extended Code Format

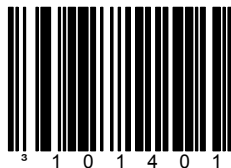


The scanner will not transmit a 'JC1' at the beginning of the code 128 portion of the coupon code.

Enable 128 Group  
Separators

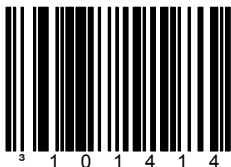

"GS" (1DH) character will be transmitted with coupon Code 128 codes.

\* Disable 128 Group  
Separators

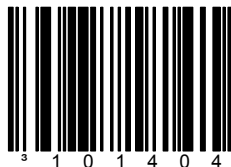


"GS" (1DH) character will not be transmitted with coupon Code 128 codes.

\* 100 msec to Find  
Supplemental



The scanner will allot 100 milliseconds to "find" an add on after a main UPC/EAN bar code has been scanned.

200 msec to Find  
Supplemental

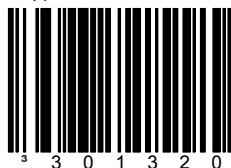


The scanner will allot 200 milliseconds to "find" an add on after a main UPC/EAN bar code has been scanned.

400 msec to Find  
Supplemental



The scanner will allot 400 milliseconds to “find” an add on after a main UPC/EAN bar code has been scanned.


Enable Code ID's with  
Supplements

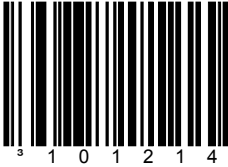

\* Disable Code ID's with  
Supplements




Allow 2/5 on 977 Bar Code

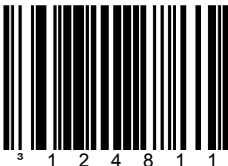

This feature allows either 2 or 5 digit supplements if 977 mode is active.

Allow 2 on 977 Bar Code

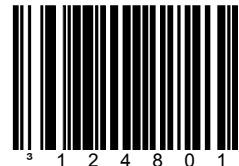


This feature allows 2 digit supplements if 977 mode is active.


## SECTION B

## SUPPLEMENTS


\* Beep Once on  
Supplements

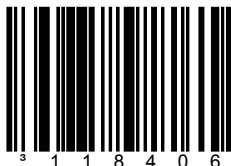


Beep twice on  
Supplements

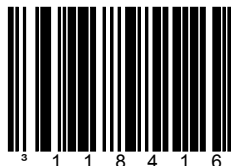

Enable ISBN Check Digit  
Transmission

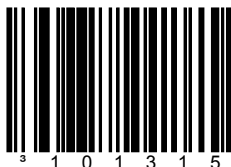


Disable ISBN Check Digit  
Transmission

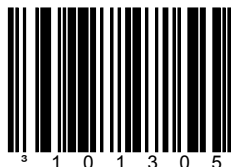

This feature is not  
available with all  
models.

Enable Bookland to ISBN Conversion

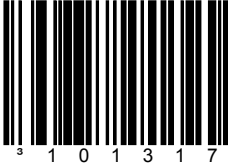


\* Disable Bookland to ISBN Conversion




This feature is not available with all models.

Enable ISBN Re-Formatting

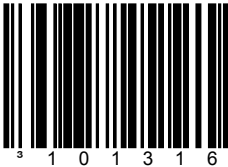

\* Disable ISBN Re-Formatting

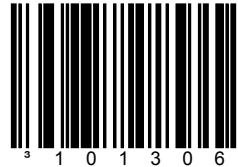

This feature is not available with all models.


## SECTION B

## SUPPLEMENTS


Enable ISSN Check Digit  
Transmission



\* Disable ISSN Check Digit  
Transmission

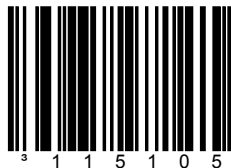

Enable  
ISSN Re-Formatting

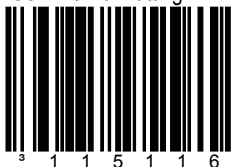

\* Disable  
ISSN Re-Formatting



Transmit a hyphen with the  
barcode.

Enable 977 to  
ISSN Conversion



\* Disable 977 to  
ISSN Conversion



Convert 977 periodicals to  
ISSN format.

Do not convert 977  
periodicals to ISSN format.




Enable Number System 4  
Coupon Code 128




Supports Coupon Code 128  
for Number System 4 bar  
codes.

\* Disable Number System  
4 Coupon Code 9128

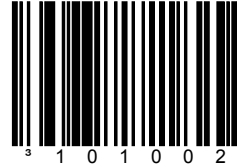

Enable UPC Discard

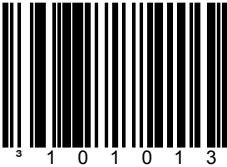


Supports UPC discard if the  
Code 128 portion of the  
Coupon Code 128 is  
scanned.

\* Disable UPC Discard



Allow Supplements and  
UPC in Same Line

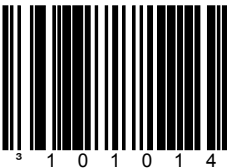

Disable Supplements and  
UPC in Same Line



This feature requires  
2 digit supplements be  
enabled as well as  
required redundancy  
and supplements.




## \* Enable RS-232



The scanner will work with RS-232  $\pm 12V$  serial output.

## Load Keyboard Wedge Defaults

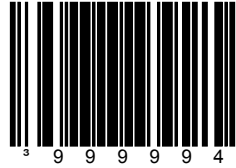

Scan this before selecting Normal or Stand Alone Mode.

## Enable Light Pen/Wand Communication




Use this option if a scanner is used in place of a light pen.

## Enable Keyboard Wedge Emulation



Select if the scanner provides keyboard emulation by converting the scanned bar code data to the PC keyboard scan code equivalent.

## Enable Stand-Alone Keyboard Scanner

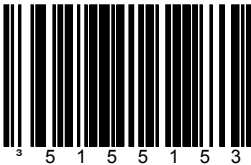


Allows the scanner to be used without an external keyboard.

## SECTION C


## COMMUNICATIONS

## Load OCIA Defaults

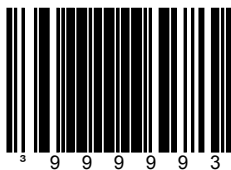


Scan this before selecting  
Enable OCIA output.

## Enable OCIA Output

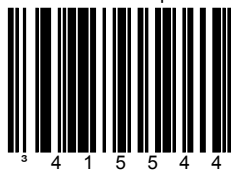

Select this option if the  
communications  
requirement is an Optically  
Coupled Interface Adapter  
(OCIA). This is a docked  
(by the host) serial  
interface.

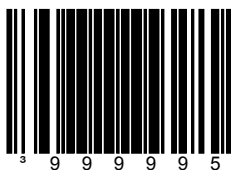Load  
IBM 46xx Defaults

Scan this before selecting  
Enable IBM 46xx  
Communication

Enable IBM 46xx  
Communication

Select this option for IBM  
46xx SIOC/RS485  
communications.



Not all scanners  
support this interface.  
The correct interface  
board is required.

Load Low Speed  
External USB Defaults †




† Refer to Section P for full speed USB options.

Enable  
Low Speed USB †



Load Low Speed  
Internal USB Defaults †

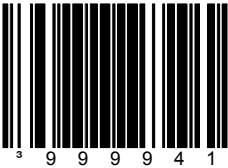

Enable  
No Communication Mode




Select this option if the scanner **does not** interface with the host device.

Reserved




Reserved

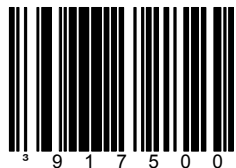



Allow Configuration Mode  
on Power-Up

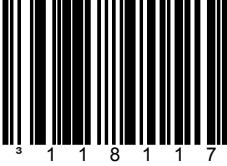


The scanner can only enter  
MetroSet® mode before any  
bar codes are scanned.

\* Allow Configuration Mode  
Anytime




Allow MetroSet®  
configuration at any time.

Allow Configuration Codes  
on Power Up

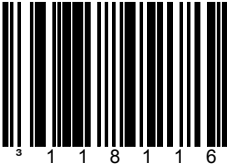


Once a product bar code is  
scanned after power-up, the  
scanner will not accept  
configuration bar codes.

\* Allow Configuration  
Codes Anytime

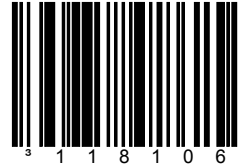


Allows scanning of  
configuration bar codes any  
time.

Enable  
Single Code Configuration

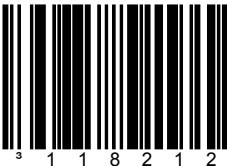


Disable  
Single Code Configuration

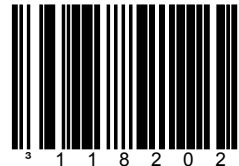

## SECTION D


## SCAN BUFFERS

## \* 1 Scan Buffer

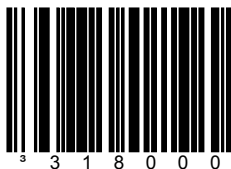


The scanner will scan one bar code in the scan field and not scan again until the bar code is removed from the scan field for the duration of the same symbol time out.

## 2 Scan Buffers

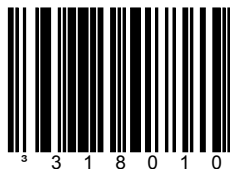


The scanner will scan 2 bar codes in the scan field one time each. These 2 bar codes will not be scanned again until they are removed from the scan field for the duration of the same symbol time out.

## 3 Scan Buffers

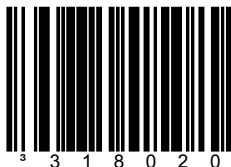

Same function as 2 Scan Buffers, but 3 bar codes are in the scan field.

## 4 Scan Buffers

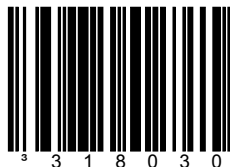

Same function as 2 Scan Buffers, but 4 bar codes are in the scan field.



5 Scan Buffers




Same function as 2 Scan Buffers, but 5 bar codes are in the scan field.

6 Scan Buffers




Same function as 2 Scan Buffers, but 6 bar codes are in the scan field.

7 Scan Buffers

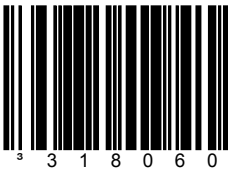

Same function as 2 Scan Buffers, but 7 bar codes are in the scan field.

8 Scan Buffers

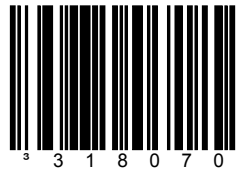


Same function as 2 Scan Buffers, but 8 bar codes are in the scan field.

## SECTION D

## REDUNDANT SCANS

\* 0 Redundant Scans

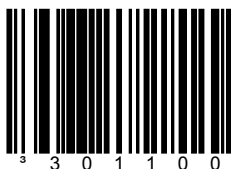


Requires 1 good decode for a "good scan".

1 Redundant Scans




Requires 2 consecutive decodes of the same bar code data for a "good scan".

2 Redundant Scans

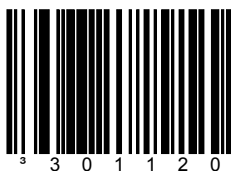

Requires 3 consecutive decodes of the same bar code data for a "good scan".

3 Redundant Scans

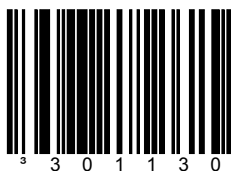

Requires 4 consecutive decodes of the same bar code data for a "good scan".

## 4 Redundant Scans




Requires 5 consecutive decodes of the same bar code data for a "good scan".

## 5 Redundant Scans




Requires 6 consecutive decodes of the same bar code data for a "good scan".

## 6 Redundant Scans

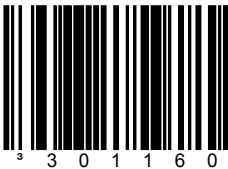

Requires 7 consecutive decodes of the same bar code data for a "good scan".

## 7 Redundant Scans

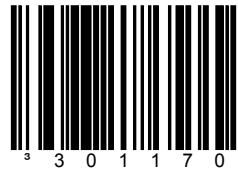


Requires 8 consecutive decodes of the same bar code data for a "good scan".

## SECTION D

## MISCELLANEOUS DECODE FEATURES

\* Enable Segmented  
UPC Decoding

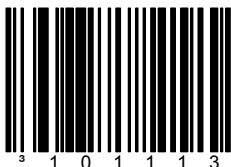


Enabling segmented UPC decoding aids in deciphering damaged or incomplete bar codes.

Disable Segmented  
UPC Decoding




Disable this feature when bar codes are in good reading condition. This will speed up decoding and improve over all accuracy.

Optional  
Same Symbol Check

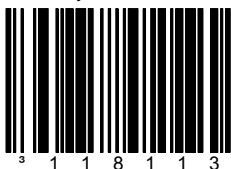

Requires 1 different character between successive bar codes to consider the bar code “new”.

\* Normal  
Same Symbol Check

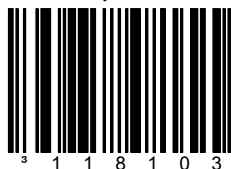

Requires 3 different characters between successive bar codes to consider the bar code “new”.

**i** Do not change these settings unless instructed by a Metrologic representative.


\* Optimize for  
Low Density Codes †




Optimize for  
High Density Codes †




Fixed for  
High Density Codes †

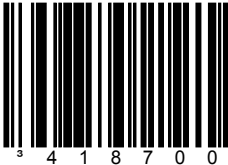

Fixed for  
Medium Density Codes †

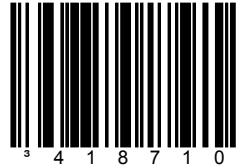

Fixed for  
Low Density Codes †

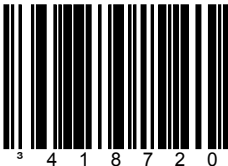


† For use with  
omnidirectional  
scanners only.

## SECTION D


## SAME SYMBOL TIME OUTS

These numbers determine the length of time before a bar code can be rescanned after it is removed from the scan field. Single code fixed settings in msec of No, 50, 100, 200, 500, 1200 (1.2 sec), 2000 (2.0 sec) and infinite are available. User configurable values can be set in user-configurable increments of 50 msec to 6350 msec (6.35 sec).


No Same Symbol Time Out

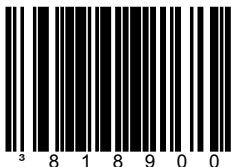


Same Symbol Time Out  
100 msec

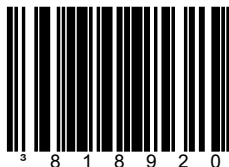


Same Symbol Time Out  
200 msec

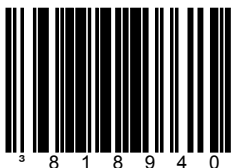


\* Same Symbol Time Out  
500 msec

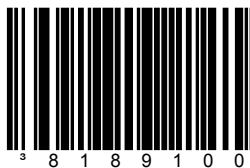


Same Symbol Time Out  
1200 msec

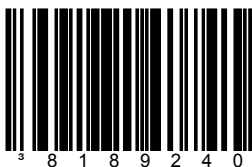

Same Symbol Time Out  
2000 msec

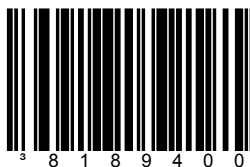

Infinite  
Same Symbol Time Out

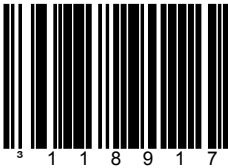


The scanner will not repetitively scan the same bar code.



This option overrides the symbol rescan time-outs.


~ Variable  
Same Symbol Time Out

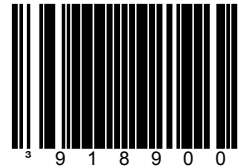

Using the Multi-Code Method (page x), scan this bar code and a code byte sequence from Section M to set the same symbol time-out duration. Values range from 001 to 127 (50 to 6350 msec).


**BARCODE ABSENCE**

\* Enable Bar Code  
Absence Detection †

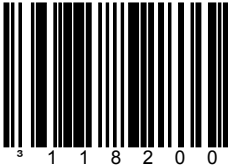


† Excludes the MS2000 Stratos Series.


Disable Bar Code  
Absence Detection †

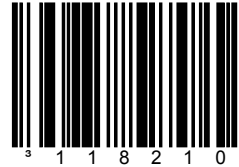

Enable Stratos Bar Code  
Absence Detection

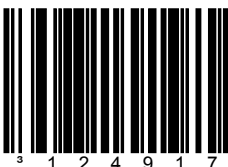

\* Disable Stratos Bar Code  
Absence Detection

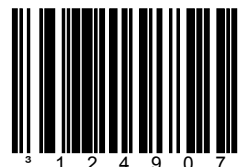

The scan field must be free of data for 50 milliseconds to accept a new bar code.

## SECTION D


## LED OPTIONS

Flash Green LED if  
Rescan Allowed




This indicates same symbol  
timeout has elapsed.

\* Do not flash Green LED if  
Rescan Allowed

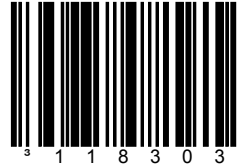

Reverse LED Functions

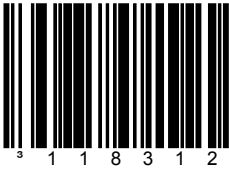


Red = Laser On  
Green = Good Read

\* Normal LED Functions




Green = Laser On  
Red = Good Read

\* Laser LED High Intensity

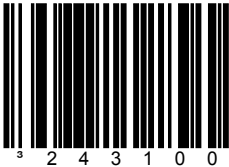

Laser LED Intensity is High  
or Normal.

Laser LED Low Intensity

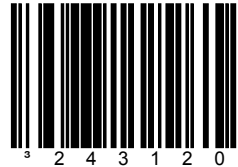

Laser LED is Low Intensity



This feature is not  
available with all  
models.



Laser LED Off



The laser LED does not signify laser ON. The LED will continue to light for all other functions.




This feature is not available with all models.

\* Scan LED High Intensity



Scan LED Intensity is High or Normal.

Scan LED Low Intensity

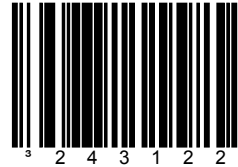


Scan LED Intensity is Low Intensity



This feature is not available with all models.

Scan LED Off

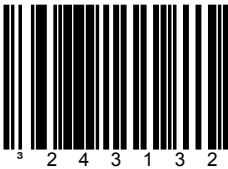

The scan LED does not signify barcode scanning. The LED will continue to light for all other functions.



This feature is not available with all models.

## SECTION D

## BEEPER OPTIONS


\* Normal Tone



Optional Tone 1



Optional Tone 2

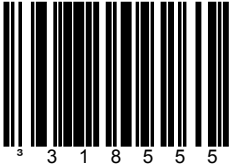


Optional Tone 3




Optional Tone 4



Optional Tone 5

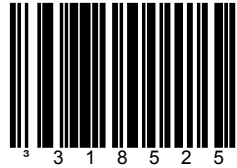


Optional Tone 6

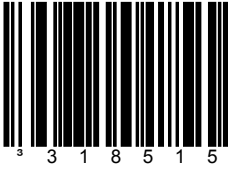

No Beep




\* Enable Good Scan Beep

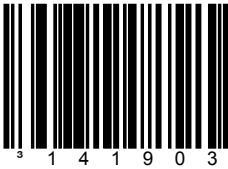


Enable good scan beep on power up.


Disable Good Scan Beep

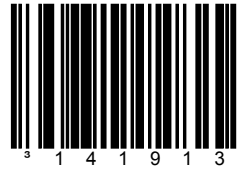


Disable good scan beep on power up.


\* Enable Button Beep Controls

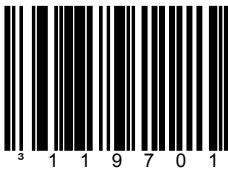

 This feature is not available with all models.

Disable Button Beep Controls

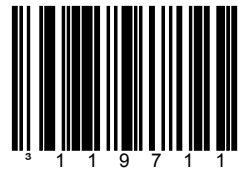

 This feature is not available with all models.

## SECTION D

## BEEPER OPTIONS




Next Beep Tone




Next Volume



\* Loudest Volume

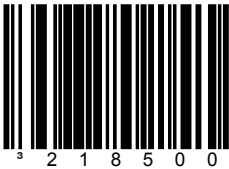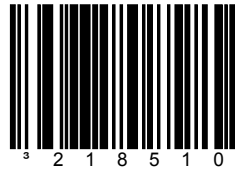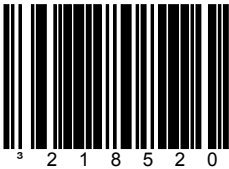2<sup>nd</sup> Loudest Volume3<sup>rd</sup> Loudest Volume

No Volume

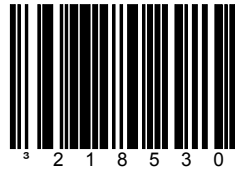


\* Beep Once on Supplements




Beep Twice on Supplements



Enable Fast Beep

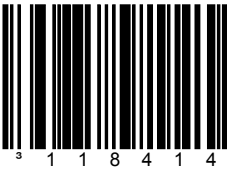

\* Disable Fast Beep

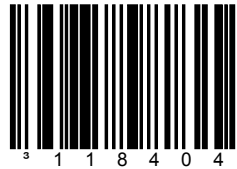

## SECTION D


## BEEPER OPTIONS

Beep on BEL Command




The scanner beeps when it receives a BEL character from the host. If a number is sent within 200 msec before the BEL character, then the scanner will beep that number of times.

\* Ignore BEL Command

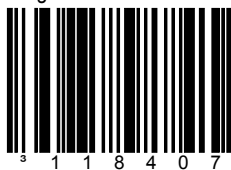Enable Light Pen Toggle  
During Beep

The scanner will beep and toggle the light pen data line on a successful decode. This drives a "good read" indicator.

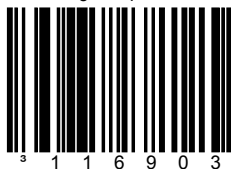\* Disable Light Pen Toggle  
During Beep

## SECTION D INTER-CHARACTER DATA TRANSMISSION DELAYS

Use these codes to select the amount of delay between sending data characters and "Bar Code" records from the scanner to the host. This helps prevent the scanner from overflowing host input buffers.


\* 1 msec  
Inter-Character Delay




10 msec  
Inter-Character Delay



25 msec  
Inter-Character Delay

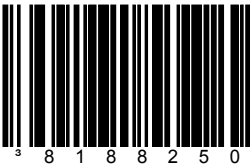

~ Variable msec  
Inter-Character Delay

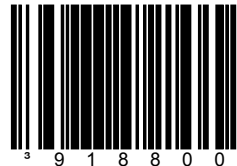


Scan this bar code and a sequence of code bytes in Section M to set the delay between characters sent to the host system. Delay range can be set from 1 to 255 msecs.

Refer to the *Multi-Code Configuration Method* on page x.

## SECTION D INTER-CHARACTER DATA TRANSMISSION DELAYS

---

No Inter-Character Delay

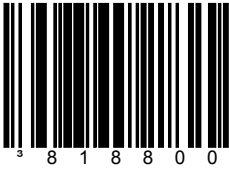

## INTER-RECORD DATA TRANSMISSION DELAYS


---

~ Variable


Inter-Record Delay



Turn Off Laser During  
Inter-Record Delay

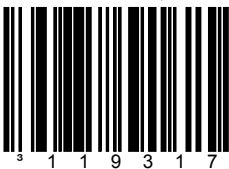


\* Leave Laser On During  
Inter-Record Delay

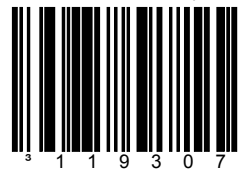




Enable  
Communications Time Outs

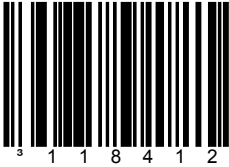

\* Disable Communications  
Time Outs



\* Beep Before Transmit

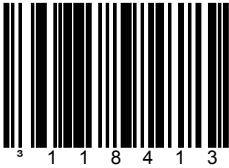


Scanner will beep before  
each label is transmitted.

Beep After Transmit




Scanner will beep after each  
label is transmitted.

~ Variable Communications  
Time Out

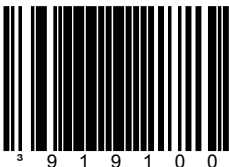

\* Default Communications  
Time Out (2 secs)

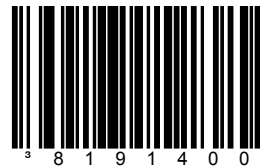


## SECTION D

## COMMUNICATION TIME OUT OPTIONS


Short Communications Time  
Out (1 sec)




Long Communications  
Time Out (4 secs)

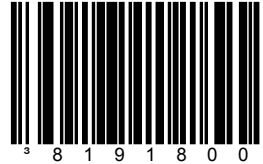


Three Beeps on Time Out

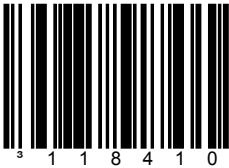


\* No Beeps on Time Out

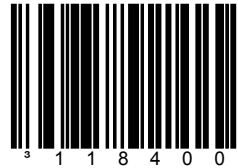


Razzberry Tone on  
Time Out

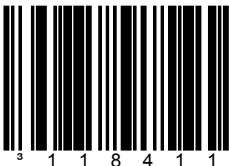

\* No Razzberry Tone  
on Time Out

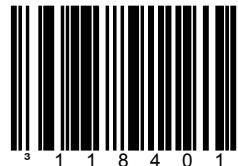

Enable "D/E" Disable  
Command

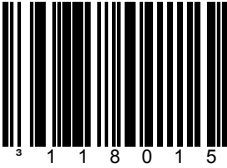


The scanner will disable scanning after it receives and ASCII "D" from the host device. It will enable scanning when it receives an ASCII "E".

\* Disable "D/E" Disable




Do not monitor D/E  
commands.

Enable "Z/R" Type  
D/E Simulation

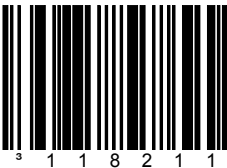

The scanner will disable scanning after it receives an ASCII "Z" from the host device. It will enable scanning when it receives an ASCII "R".

\* No "Z/R" Type  
D/E Simulation

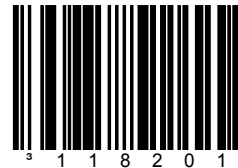


Do not monitor Z/R  
commands.

## SECTION D


## HOST SCANNER COMMANDS

## Enable "F/L" Laser Command

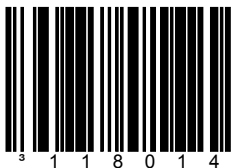


The scanner will turn off the laser after receiving an ASCII "F" character. The laser will turn on after it receives an ASCII "L" character.

## \* Disable "F/L" Laser Command

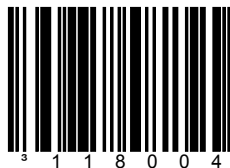

Do not monitor "F/L" commands.


## Motor "On/Off" Using M/O Commands †

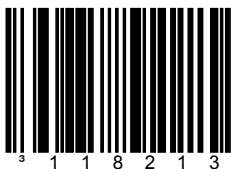

The scanner will turn the motor OFF after it receives an ASCII "O" character. The motor will turn ON after the scanner receives an ASCII "M" character. †

† For use with omnidirectional scanners only.

## \* Disable "M/O" Commands

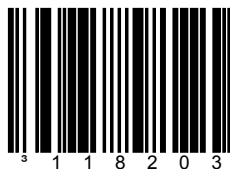

Do not monitor the M/O commands.


Enable I Command




Disable I Command




Enable i Command

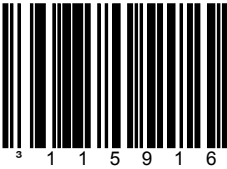

Disable i Command

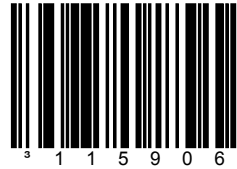

Enable SI/SO Command

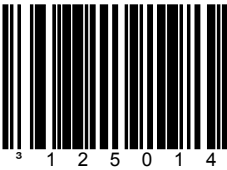


Disable SI/SO Command



## SECTION D


## HOST SCANNER COMMANDS

Use  
DTR Scan Disable

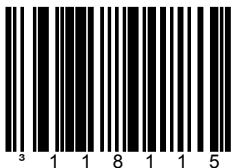


The scanner will monitor the DTR input to determine if scanning should be allowed. A +12V "active" level enables decoding. A -12V "inactive" level disables decoding.

\* Do not use  
DTR Scan Disable

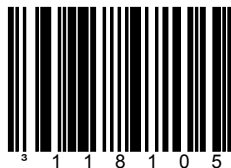


Do not monitor the DTR input.

Enable Pass Through

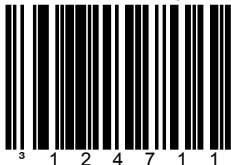

Disable Pass Through

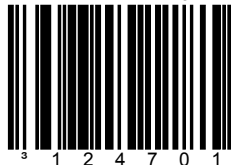


The AUX scanner must be configured for the same Baud rate as the host, with STX prefix, Nixdorf ID characters and CR Terminator enabled.


Activate on DC2 Character




\* Do Not Activate on DC2  
Character

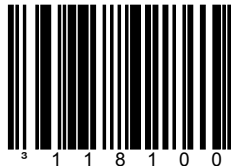


Transmit "NO READ" if  
DC2 Activated

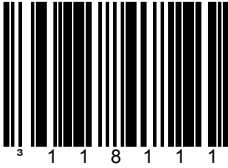


Do Not Transmit "NO  
READ" if DC2 Activated

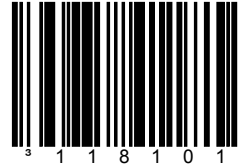

No Green LED During  
"NO READ" Xmit

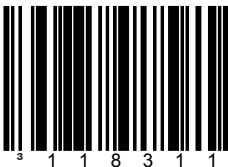


\* Green LED During  
"NO READ" Xmit

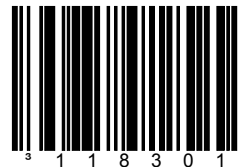

## SECTION D

## POWER SAVE MODES


## Always Power Save Mode†

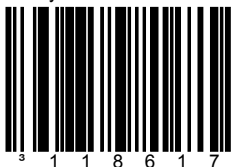

† For use with omnidirectional scanners only.


The scanner enters power save mode immediately after power-up and after each bar code scanned. †

## No Power Save Mode†

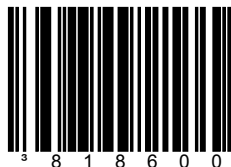


The scanner will never enter power save mode. †

## Power Save Mode in 1 minute †

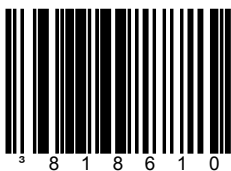


The scanner enters power save mode when the scanner remains idle for 1 min. †

## Power Save Mode in 2 minutes †

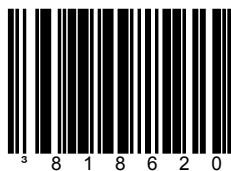


The scanner enters power save mode if the scanner remains idle for 2 min. †

## Power Save in 5 Minutes †

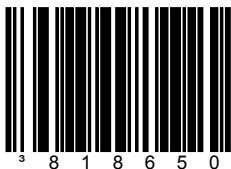

The scanner enters power save mode if the scanner remains idle for 5 min. †

## Power Save in 10 Minutes †

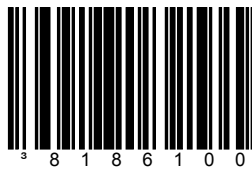

The scanner enters power save mode if the scanner remains idle for 10 min. †



Power Save in 20 Minutes †



† For use with omnidirectional scanners only.


The scanner enters power save mode if the scanner remains idle for 20 min. †

Power Save in 30 Minutes †



The scanner enters power save mode if the scanner remains idle for 30 min. †

Default Power Save Mode ††

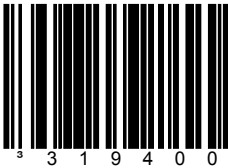

†† Some Metrologic scanners automatically 'wake' or exit from the power save mode if the IR detects movement. Other Metrologic scanners wake if their multi-Function Button is pressed. Please refer to the Installation and User's Guide specific to each product.



This feature is not available with all models.

Blink Power Save Mode ††



The laser Blinks OFF & ON after a configured period of non-use.

When the scanner recognizes a bar code it will exit the blink mode.




This feature is not available with all models.

SECTION D

POWER SAVE MODES

Laser OFF  
Power Save Mode ††

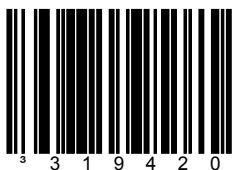

The laser turns OFF after a configured period of non-use.



This feature is not available with all models.

Laser Motor OFF  
Power Save Mode ††




The laser and motor turns OFF after a configured period of non-use.



This feature is not available with all models.


†† Some Metrologic scanners automatically 'wake' or exit from the power save mode if the IR detects movement. Other Metrologic scanners wake if their multi-Function Button is pressed. Please refer to the Installation and User's Guide specific to each product.

Dual #1  
Power Save Mode ††

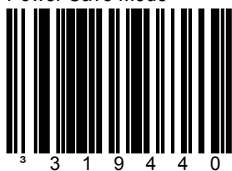


The laser blinks OFF & ON after a configured period of non-use then the laser and motor turn OFF at thirty-minute intervals.

**Example 1:**  
Example of Dual #1 Power Save Mode with the power save timeout set to 15 minutes.




This feature is not available with all models.

Dual #2  
Power Save Mode ††

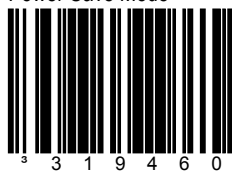


The laser turns OFF after a configured period of non-use then the motor turns OFF at thirty-minute intervals.

**Example 2:**  
Example of Dual #2 Power Save Mode with the power save timeout set to 15-minutes.



This feature is not available with all models.

\* Enable  
Power Save Switch

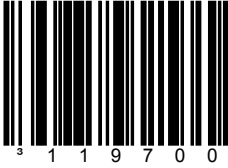

This feature is not available with all models.

Disable  
Power Save Switch



This feature is not available with all models.

## SECTION D

## JAPANESE DOUBLE FIELD SUPPORT

To support Japanese Double Field Bar Codes, first make sure you have your scanner programmed to the following settings.


- Disable Segmented UPC Decoding
- Enable 2 scan buffers
- Disable bar code absence detection
- Enable normal code selects

Then, scan the **Enable Japan 2 Field** bar code.

Enable Japan 2 Field



\* Disable Japan 2 Field

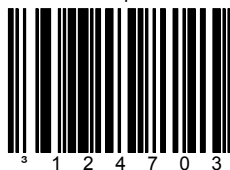

**Next**, select the matching bar codes that are used for double field symbols.

Note that only UPC/EAN bar codes are allowed in double field mode.

Select at least two characters for each bar code. The maximum is 4 upper and 4 lower bar codes.


**EXAMPLE****To select 54 as the first two characters in the Upper Code pair 1:**

1. Scan the *Upper Code 1 Character 1* bar code (shown on page D-31)
2. Determine the correct Code Byte Value for the character 5 in 54  
(Refer to Section M's ASCII Reference Table on pages M-6 to M-10)
  - a. Scan Code Byte 0
  - b. Scan Code Byte 5
  - c. Scan Code Byte 3
3. Scan the *Upper Code 1 Character 2* bar code (shown on page D-31)
4. Determine the correct Code Byte Value for the character 4 in 54.
  - a. Scan Code Byte 0
  - b. Scan Code Byte 5
  - c. Scan Code Byte 2

**To select 18 as the first two characters in the Lower Code pair 1:**

1. Scan the *Lower Code 1 Character 1* bar code (shown on page D-31)
2. Determine the correct Code Byte Value for the character 1 in 18  
(refer to Section M's ASCII Reference Table)
  - a. Scan Code Byte 0
  - b. Scan Code Byte 4
  - c. Scan Code Byte 9
3. Scan the *Lower Code 1 Character 2* bar code (shown on page D-31)
4. Determine the correct Code Byte Value for the character 8 in 18.  
(Refer to Section M's ASCII Reference Table on pages M-6 to M-10)
  - a. Scan Code Byte 0
  - b. Scan Code Byte 5
  - c. Scan Code Byte 6


Upper Code 1 Character 1

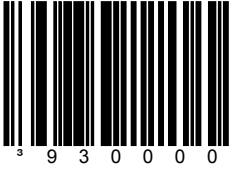

Upper Code 1 Character 2



Lower Code 1 Character 1

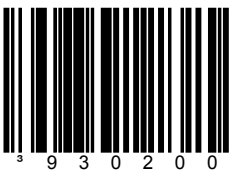

Lower Code 1 Character 2



Upper Code 2 Character 1




Upper Code 2 Character 2



## SECTION D

## JAPANESE DOUBLE FIELD SUPPORT

Lower Code 2 Character 1

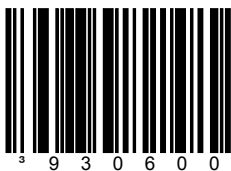

Lower Code 2 Character 2



Upper Code 3 Character 1



Upper Code 3 Character 2




Lower Code 3 Character 1



Lower Code 3 Character 1



Upper Code 4 Character 1

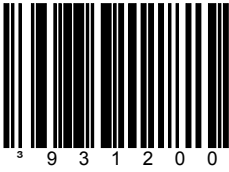

Upper Code 4 Character 2



Lower Code 4 Character 1




Lower Code 4 Character 2



## SECTION D

## JAPANESE DOUBLE FIELD SUPPORT

## Japanese Trial Time

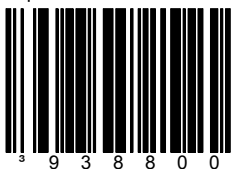


Scan the above bar code followed by the 3 code bytes in Section M that represent the timeout value desired if in special code select mode.

1 is equal to 100 milliseconds


**Example:**

If a 500 millisecond timeout is desired, scan the above code followed by code byte 0, code byte 0 and code byte 5.

## Enable Code Selects

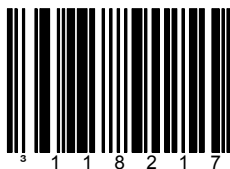

## Enable Error Tone

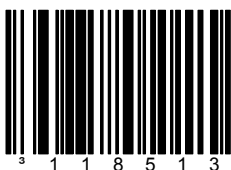


Adds ability to sound RAZZ error tone when special code selects fail.

## \* Disable Error Tone





## Scanability ON

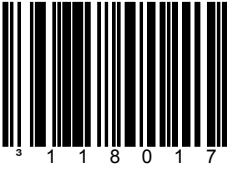


The scanner will enter scanability test mode.

**i** Do not enable unless instructed to by a Metrologic representative.

## \* Scanability OFF




## Scan Count Mode ON

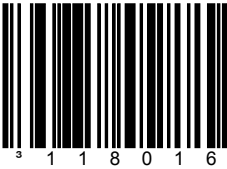

The scanner will enter scan count test mode and the scanner's firmware number will transmit to the host.

**i** Do not enable unless instructed to by a Metrologic representative.

## \* Scan Count Mode OFF

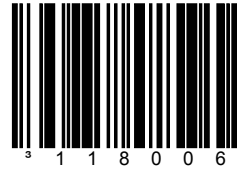

## Temporary Symbologies



The *Temporary Symbologies* test code enables all major types of bar code symbologies, reduces the minimum number of characters required to 1, sets the minimum ITF characters required to 2, and adds the symbology name as a prefix to the transmission. This feature is disabled when power to the scanner is cycled OFF and ON.


**i** Do not enable unless instructed to by a Metrologic representative






Scan the *Enter/Exit Configuration Mode* bar code before trying to set this feature. Please refer to the Multi-Code method on page x.

Enter/Exit  
Configuration Mode

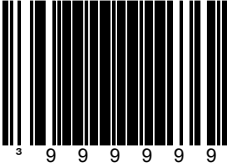


~ Configurable Prefix  
Character #1

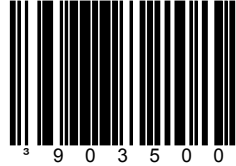

A prefix ID can be added and assigned for data transmission. Use this code with a 3-code byte sequence from Section M that represents the desired character.

~ Configurable Prefix  
Character #2

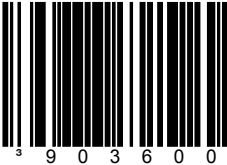

Assigns a 2<sup>nd</sup> configurable prefix character.

~ Configurable Prefix  
Character #3




Assigns a 3<sup>rd</sup> configurable prefix character.

~ Configurable Prefix  
Character #4



Assigns a 4<sup>th</sup> configurable prefix character.

~ Configurable Prefix  
Character #5

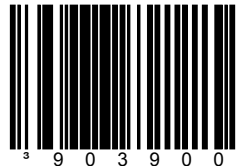


Assigns a 5<sup>th</sup> configurable prefix character.

SECTION E


CONFIGURABLE PREFIXES, ALL DATA

~ Configurable Prefix  
Character #6

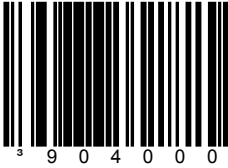


Assigns a 6<sup>th</sup> configurable prefix character.

~ Configurable Prefix  
Character #7

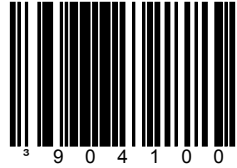


Assigns a 7<sup>th</sup> configurable prefix character.

~ Configurable Prefix  
Character #8

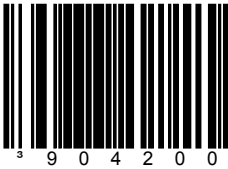


Assigns a 8<sup>th</sup> configurable prefix character.

~ Configurable Prefix  
Character #9

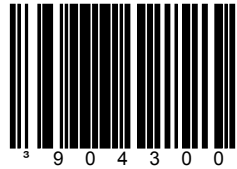


Assigns a 9<sup>th</sup> configurable prefix character.

~ Configurable Prefix  
Character #10

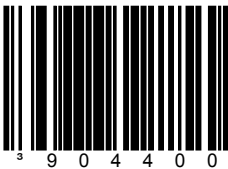

\* Clear all User  
Configurable Prefixes

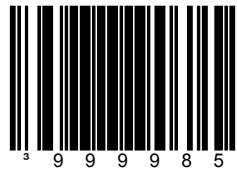

## SECTION E CONFIGURABLE ID CHARACTERS, CODE SPECIFIC

---

\* Use Configurable Code ID Bytes as Prefixes



User configured, code specific ID bytes are transmitted before the data.



If using prefixes, user configured suffixes can not be used.

Use Configurable Code ID Bytes as Suffixes



User configured, code specific ID bytes are transmitted after the data.




If using suffixes, user configured prefixes can not be used.

## IDENTIFIERS CHARACTER

---

~ Configurable UPC-A ID †

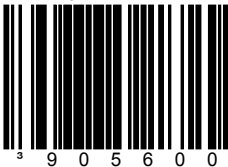


~ Configurable UPC-E ID †




† While using the Multi-Code method, scan this bar code followed by the 3 code byte codes in Section M that represent a unique ID character to be associated with this bar code type. (Refer to the *Multi-Code Method* on page x.)

**SECTION E CONFIGURABLE ID CHARACTERS, CODE SPECIFIC**

~ Configurable EAN-8 ID †

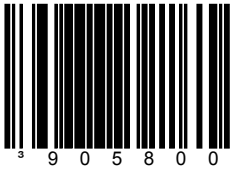


~ Configurable EAN-13 ID †

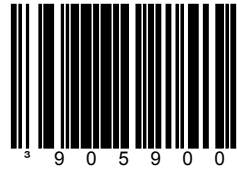


† While using the Multi-Code method, scan this bar code followed by the 3 code byte bar codes in Section M that represent a unique ID character to be associated with this bar code type. (Refer to the *Multi-Code Method* on page x.)

~ Configurable Code 39 ID †

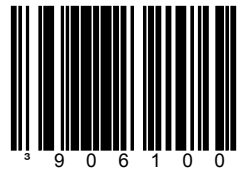
~ Configurable  
Code 128 ID †

## SECTION E CONFIGURABLE ID CHARACTERS, CODE SPECIFIC

~ Configurable Code 93 ID †

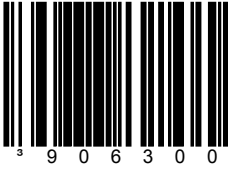


~ Configurable Code 11 ID †

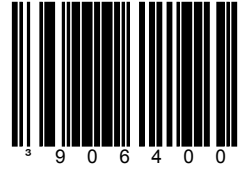


† While using the Multi-Code method, scan this bar code followed by the 3 code byte bar codes in Section M that represent a unique ID character to be associated with this bar code type. (Refer to the Multi-Code method on page x.)

~ Configurable Telepen ID †

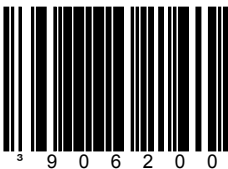


~ Configurable  
TRI-OPTIC ID †

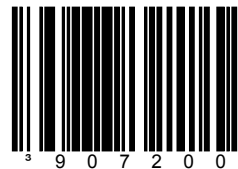

## SECTION E CONFIGURABLE ID CHARACTERS, CODE SPECIFIC

~ Configurable  
Standard 2 of 5 ID †

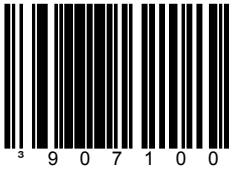


~ Configurable  
Interleaved 2 of 5 ID †



† While using the Multi-Code method, scan this bar code followed by the 3 code byte bar codes in Section M that represent a unique ID character to be associated with this bar code type. (Refer to the *Multi-Code method* on page x.)

~ Configurable  
Matrix 2 of 5 ID †

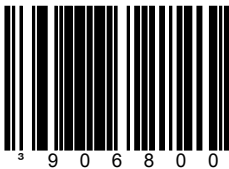

~ Configurable  
Airline 2 of 5 ID †





## SECTION E CONFIGURABLE ID CHARACTERS CODE SPECIFIC

~ Configurable  
MSI Plessey ID †



~ Configurable  
UK Plessey ID†



† While using the Multi-Code method, scan this bar code followed by the 3 code byte bar codes in Section M that represent a unique ID character to be associated with this bar code type. (Refer to the *Multi-Code method* on page x.)

~ Configurable  
Codabar ID †




\* Clear all Configurable  
Code Specific ID's †



## SECTION E


## STANDARD PREFIX CHARACTERS

Enable STX Prefix

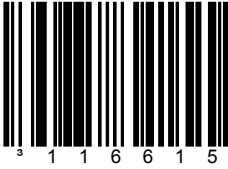


The scanner will transmit a **Start of TeXt** (ASCII 02H) before each bar code.

\* Disable STX Prefix

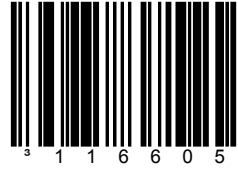


Will not transmit a **Start of TeXt** (ASCII 02H) before each bar code.


Enable Rockford-Thompson Mode

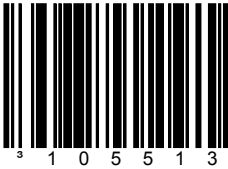

\* Disable Rockford-Thompson Mode

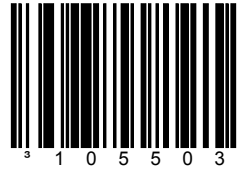


Enable AIM ID Characters

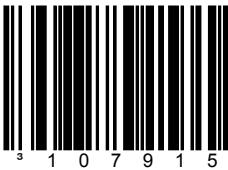

The scanner will transmit AIM symbology identifiers.

\* Disable AIM ID Characters

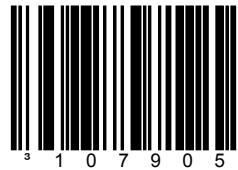

The scanner will not transmit AIM symbology identifiers.



Some scanner models may not support this feature.

## Enable UPC Prefix ID



When enabled, the scanner will transmit a prefix before any UPC/EAN bar code.

The prefixes are as follows:


- A (UPC-A),
- E0 (UPC-E),
- F (EAN-13), and
- FF (EAN-8).

## \* Disable UPC Prefix ID



Do not send prefix ID Characters with UPC/EAN codes.

## Enable NCR Prefix ID

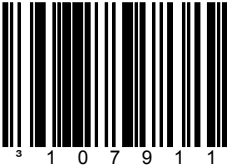

When enabled, the scanner will transmit a prefix before the following code types.

The prefixes are as follows:

- A (UPC-A),
- E0 (UPC-E),
- FF (EAN-8),
- F (EAN-13),
- B1 (Code 39),
- B2 (ITF) and
- B3 (Code 128 & other codes).


## \* Disable NCR Prefix ID



## SECTION E


## STANDARD PREFIX CHARACTERS

Enable Nixdorf ID  
Characters

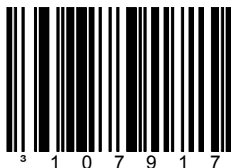


This option transmits code  
identifiers before each bar  
code for many  
Siemens/Nixdorf registers.

\* Disable Nixdorf ID  
Characters

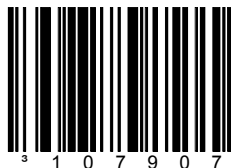


This option will not transmit  
Siemens/Nixdorf code  
identifiers.

Enable SANYO ID  
Characters

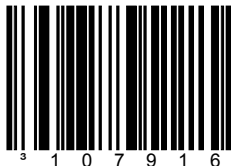

Transmit Sanyo ID  
Characters.

\* Disable SANYO ID  
Characters

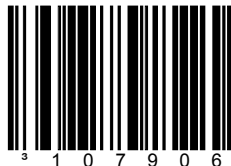

Do not transmit Sanyo ID  
Characters.


Enable TEC Register  
Format ID Characters




Disable TEC Register  
Format ID Characters




Enable TEC MA1530  
ID Characters

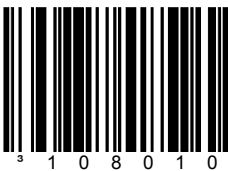

Disable TEC MA1530  
ID Characters

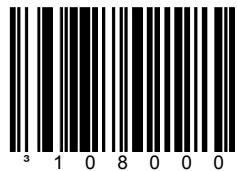

Enable Symbology Prefix

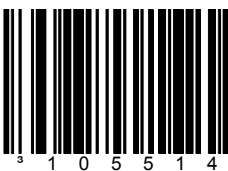

Disable Symbology Prefix




This option adds a symbology description in front of the bar code transmission.

Do not add a symbology description in front of the bar code transmission.

SECTION E

STANDARD PREFIX CHARACTERS

Enable Manufacturer ID Prefix

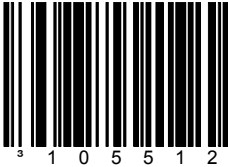


Transmits "METROLOGIC" before all bar code data to identify the scanner as a Metrologic Scanner.

\* Disable Manufacturer ID Prefix




The scanner will not transmit the manufacturer identification string.


Enable "C" Prefix

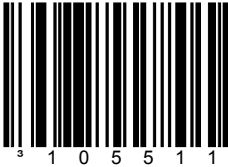


\* Disable "C" Prefix

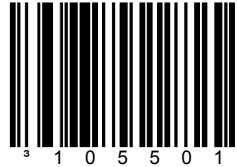

Enable "\$" Prefix ID for UPC/EAN

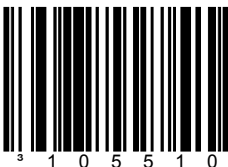

\* Disable "\$" Prefix ID for UPC/EAN

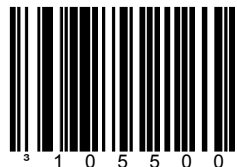

Enable Tab Prefix



The scanner will transmit a TAB (ASCII 09H) before each bar code.

\* Disable Tab Prefix



The scanner will not transmit a TAB.

Enable SNI Beetle Mode



\* Disable SNI Beetle Mode



Enable Cipher 1021 IDs




\* Disable Cipher 1021 IDs



## SECTION E


## STANDARD SUFFIX CHARACTERS

## \* Enable CR Suffix

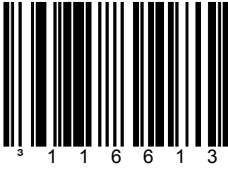


The scanner will transmit a **Carriage Return** after each bar code.

## Disable CR Suffix

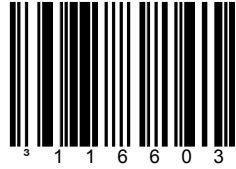

The scanner will not transmit a **Carriage Return** after each bar code.

## \* Enable LF Suffix

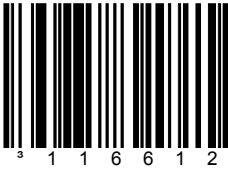

The scanner will transmit a **Line Feed** after each bar code.

## Disable LF Suffix




The scanner will not transmit a **Line Feed** after each bar code.




This feature is Disabled when keyboard wedge defaults are loaded.

## Enable Tab Suffix

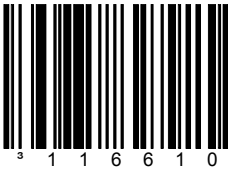

The scanner will transmit a **TAB (ASCII 09H)** after each bar code.


## \* Disable Tab Suffix

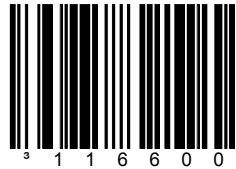

The scanner will not transmit a **TAB (ASCII 09H)** after each bar code.



## Enable ETX Suffix

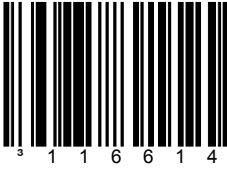


The scanner will transmit  
End of TeXt (ASCII 03H)  
after the bar code data.

## \* Disable ETX Suffix



The scanner will not  
transmit End of TeXt  
(ASCII 03H).

## Enable UPC Suffix ID

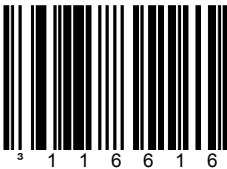

The scanner will transmit a  
suffix after any UPC/EAN  
bar code.

The suffixes are as follows:

- A (UPC-A),
- E (UPC-E),
- F (EAN-13) and
- F (EAN-8).

## \* Disable UPC Suffix ID



The scanner will not  
transmit a suffix after  
UPC/EAN bar codes.

## SECTION E

## LONGITUDINAL REDUNDANCY CHECK (LRC)

Enable Transmit of  
LRC Calculation




The scanner outputs an  
LRC check character after  
the bar code.

\* Disable Transmit of  
LRC Calculation



The scanner will not output  
an LRC (check character)  
after the bar code.

\* Start LRC on First Byte

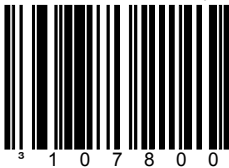

The scanner will calculate  
the LRC check digit starting  
with the first character.

Start LRC on Second Byte




The scanner will calculate  
the LRC check digit starting  
with the second character.



Scan the *Enter/Exit Configuration Mode* bar code before trying to set this feature. Refer to the *Multi-Code Method* on page x.

Enter/Exit  
Configuration Mode

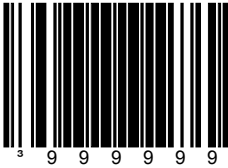

~ Configurable Suffix  
Character #1



A suffix ID can be added and assigned for data transmission. Use this code with a 3 code byte sequence from Section M that represents the desired character.

~ Configurable Suffix  
Character #2



Assigns a 2<sup>nd</sup> configurable suffix character.

~ Configurable Suffix  
Character #3



Assigns a 3<sup>rd</sup> configurable suffix character.

## SECTION E

## CONFIGURABLE SUFFIXES, ALL DATA

~ Configurable Suffix  
Character #4 †



Assigns a 4<sup>th</sup> configurable  
suffix character.


~ Configurable Suffix  
Character #5 †



Assigns a 5<sup>th</sup> configurable  
suffix character.


† While using the Multi-Code method,  
scan this bar code followed by the 3  
code byte bar codes in Section M  
that represents the desired  
character. (Refer to the *Multi-Code  
method* on page x.)

~ Configurable Suffix  
Character #6 †

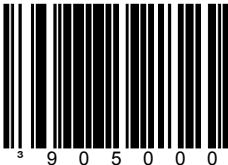

Assigns a 6<sup>th</sup> configurable  
suffix character.

~ Configurable Suffix  
Character #7 †

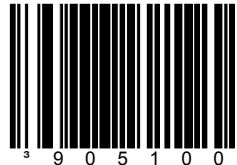

Assigns 7<sup>th</sup> configurable  
suffix character.

~ Configurable Suffix  
Character #8 †




Assigns a 8<sup>th</sup> configurable  
suffix character.

~ Configurable Suffix  
Character #9 †



Assigns a 9<sup>th</sup> configurable  
suffix character.

~ Configurable Suffix  
Character #10 †

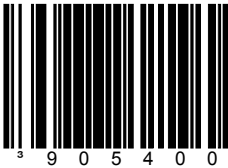

Assigns a 10<sup>th</sup> configurable  
suffix character.

† While using the Multi-Code method, scan this bar code followed by the 3 code byte bar codes in Section M that represent the desired character. (Refer to the *Multi-Code method* on page x.)

\* Clear All User  
Configurable Suffixes



SECTION E

SPECIAL FORMATS


Enable SINEKO Mode



\* Disable SINEKO Mode




Enable Newcode  
Formatting Mode A

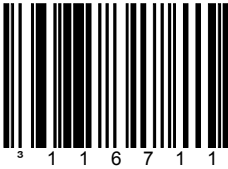

\* Disable Newcode  
Formatting Mode A



Enable Newcode  
Formatting Mode B

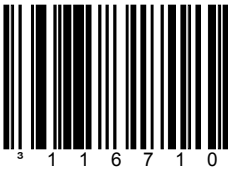


\* Disable Newcode  
Formatting Mode B



To replace a character:

1. Scan the *Enter/Exit Configuration Mode* bar code (located on page x, at the front of this guide).
2. Scan the *Character to Replace Code* (shown below).
3. Scan the ASCII Code Byte value of the character you wish to replace (refer to the ASCII reference table in Section M).
4. Scan the *Replacement Character* bar code.
5. Scan the ASCII Code Byte value of the replacement character.
6. Scan the *Enter/Exit Configuration Mode* bar code (located on page x, at the front of this guide).


Character to Replace

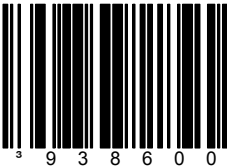

No Replacement



Replacement Character

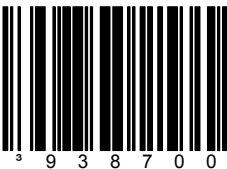






\* Transmit UPC-A  
Check Digit




Do not Transmit  
UPC-A Check Digit




Transmit UPC-E  
Check Digit

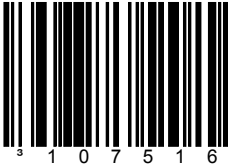


\* Do Not Transmit  
UPC-E Check Digit

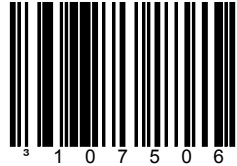

Expand UPC-E to 12 Digits

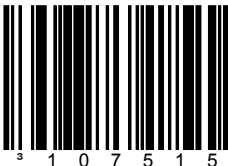

\* Do Not Expand  
UPC-E To 12 Digits

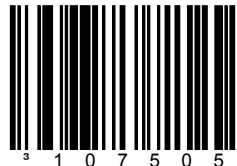

Expand UPC-E bar codes to  
the 12 digit equivalent,  
UPC-A bar codes.

Do not expand UPC-E to  
the 12 digit equivalent,  
UPC-A bar code.

## SECTION F

## UPC/EAN

Convert UPC-A to EAN-13




The scanner converts UPC-A to EAN-13 by transmitting a leading zero before the bar code.

\* Do Not Convert  
UPC-A to EAN-13



The scanner will not convert UPC-A to EAN-13.

Transmit Lead Zero  
on UPC-E

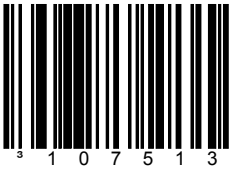


This option will transmit a zero before each UPC-E bar code.

Do Not Transmit  
Lead Zero on UPC-E



This option will not transmit a zero before each UPC-E bar code.

Convert EAN-8 to EAN-13

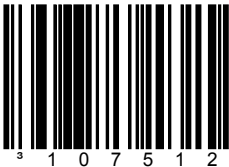


The scanner will transmit five zeros before the bar code to convert EAN-8 to EAN-13.

\* Do Not Convert  
EAN-8 to EAN-13



The scanner will not convert EAN-8 to EAN-13.

\* Transmit UPC-A  
Number System

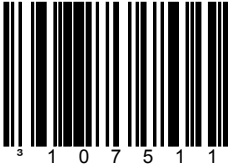


Do Not Transmit UPC-A  
Number System



**i** Metrologic strongly discourages using this feature. Duplicate numbers may result in the database.


\* Transmit  
UPC-A MFR #

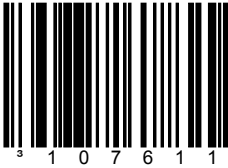


Do Not Transmit  
UPC-A MFR #



\* Transmit  
UPC-A ITEM #

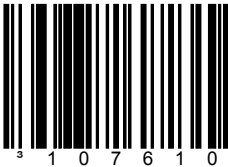


Do Not Transmit  
UPC-A ITEM #

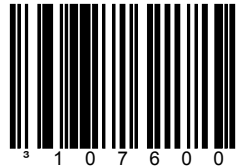


## SECTION F

## UPC/EAN


\* Transmit EAN-8  
Check Digit

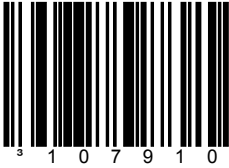

Do Not Transmit  
EAN-8 Check Digit

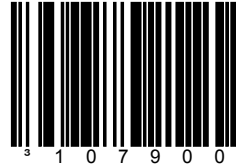


\* Transmit EAN-13  
Check Digit

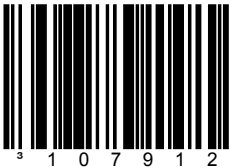

Do Not Transmit  
EAN-13 Check Digit



GTIN-14 Format

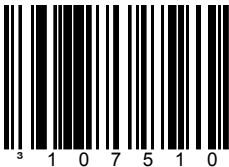


No GTIN-14 Format



This feature is not  
available with all  
models.

Transmit Codabar Start/Stop Characters

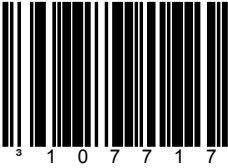

Transmits Codabar's start/stop characters before and after each bar code.

\* Do Not Transmit Codabar Start/Stop




Will not transmit Codabar's start/stop characters before and after each bar code.

Convert Codabar Start/Stop Characters to Lowercase



\* Do Not Convert Codabar Start/Stop Characters to Lowercase

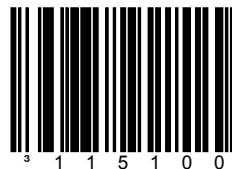

## SECTION F

## CODABAR

Enable  
CLSI Editing



CLSI type editing will be done  
before the information is  
transmitted to the host.




This option will only  
work with 14 digit  
Codabar type lengths.

\* Do Not Enable  
CLSI Editing




This option will not perform  
CLSI type editing before the  
information is transmitted to  
the host.

Enable MOD 43  
Check on Code 39

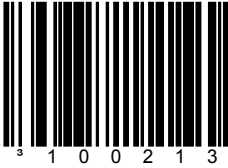


The scanner will only scan  
Code 39 bar codes that  
have a valid Modulo 43  
Check Digit.

\* Disable MOD 43 Check  
on Code 39

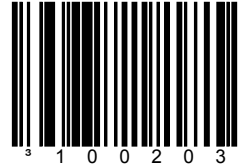


The scanner will not test  
Code 39 bar codes for a  
Modulo 43 Check Digit.

Transmit Mod 43  
Check Digit on Code 39

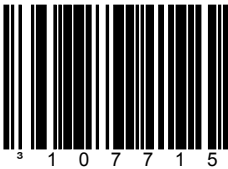

This feature works in  
conjunction with Mod 43  
Check on Code 39. Both  
must be enabled for this  
feature to work.

\* Do Not Transmit Mod 43  
Check Digit on Code 39

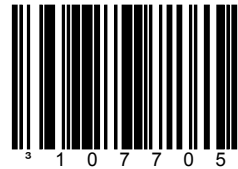

This option will not transmit  
Code 39's Mod 43 check  
character.

## SECTION F

## CODE 39

Transmit Code 39 Start/Stop  
Characters



The scanner transmits Code  
39's start/stop characters before  
and after each bar code.

\* Do Not Transmit Code 39  
Start/Stop Characters




The scanner will not transmit  
Code 39's start/stop characters  
before and after each bar code.



## SECTION F

## CODE 11 AND TELEPEN

Transmit  
Code 11 Check Digit

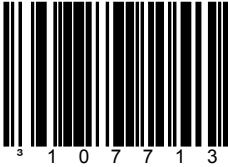


The scanner will transmit  
Code 11 check characters  
when used with the Enable  
Code 11 feature in  
Section A.

\* Do Not Transmit  
Code 11 Check Digit




The scanner will not  
transmit Code 11 check  
characters.

Enable  
Convert Telepen ^L to E

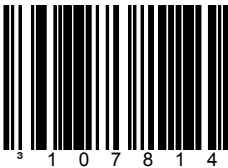


\* Disable  
Convert Telepen ^L to E

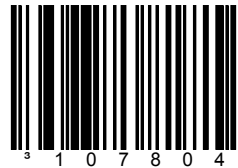

## SECTION F


## PLESSEY

Transmit  
UK Plessey Check Digit

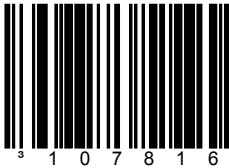


The scanner will transmit  
UK Plessey Check Digit  
characters when used with  
the Enable UK Plessey  
feature in Section A.

\* Do Not Transmit  
UK Plessey Check Digit

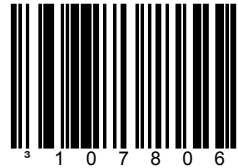


Will not transmit UK Plessey  
Check Digit characters.


Enable  
UK Plessey Special Format

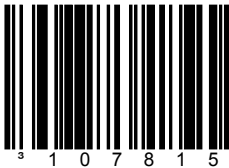


Disable  
UK Plessey Special Format

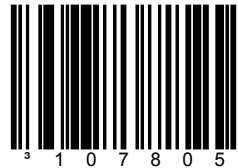


Handle Incorrect  
UK Plessey Stop Character

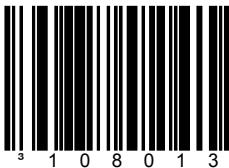

\* Normal UK Plessey Stop  
Character Handling

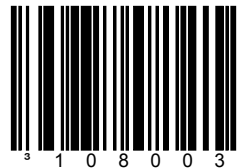


\* No MSI Plessey  
Check Digit

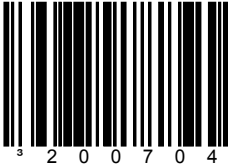


The scanner will not test  
MSI Plessey bar codes for a  
check digit.

Enable MSI Plessey MOD  
10/10 Check Digit

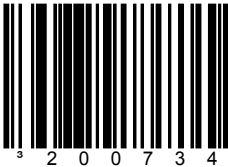


The scanner will test MSI  
Plessey bar codes for a  
double Modulo 10 check  
digit.

\* Enable MSI Plessey MOD  
10 Check Digit

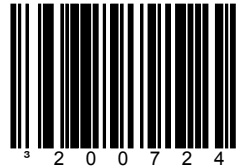


The scanner will test MSI  
Plessey bar codes for a  
single Modulo 10 check digit.

Transmit  
MSI Plessey Check Digit

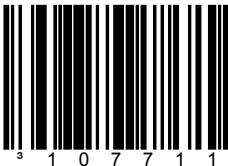

This option works in  
conjunction with one or both  
of the Enabled MSI Plessey  
Mode options.

\* Do Not Transmit  
MSI Plessey Check Digit

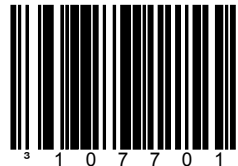


The scanner will not transmit  
MSI Plessey's check digit  
characters.

## SECTION F


## 2 OF 5

Enable Mod 10  
Check on ITF

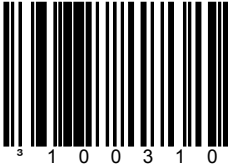


The scanner will only scan Interleaved 2 of 5 (ITF) bar codes that have a Modulo 10 check digit.

\* Disable MOD 10  
Check on ITF

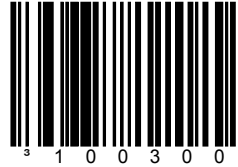


The scanner will not test Interleaved 2 of 5 (ITF) bar codes for a Modulo 10 check digit.

Transmit Mod 10  
Check Digit on ITF

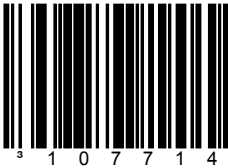


The scanner transmits Interleaved 2 of 5 (ITF) Mod 10 check character.

\* Do Not Transmit Mod 10  
Check Digit on ITF

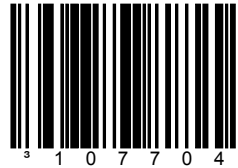


The scanner will not transmit Interleaved 2 of 5 (ITF) Mod 10 check digit character. This feature works in conjunction with Mod 10 check on ITF. Both must be enabled for this feature to work.

Transmit Matrix 2 of 5  
Check Digit

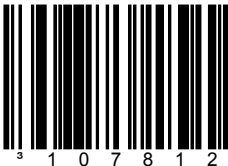

\* Do Not Transmit  
Matrix 2 of 5 Check Digit.

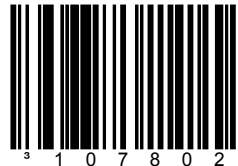

\* Enable RS-232 Mode



When enabled the scanner will work with RS-232  $\pm 12V$  serial output.

## SECTION G

## PARITY FEATURES



A parity bit is an extra data bit used to help catch data transmission errors. The scanner's parity must match the host's parity.

No Parity




Odd Parity




Select Odd Parity to set the parity bit to either 1 or 0 to ensure an odd number of bits are 1's.

\* Space Parity

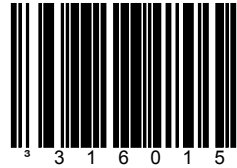


Select to set the parity bit always 0.

Even Parity

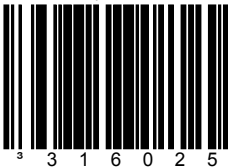

Select to set the parity bit to either 1 or 0 to ensure an even number of bits are 1's.

Mark Parity

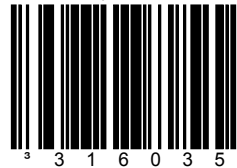


Select to set the parity bit always 1.



A "Baud" or "Baud Rate" is the speed at which data is transmitted. Select a Baud for the scanner that matches the host device.


115200 BAUD Rate

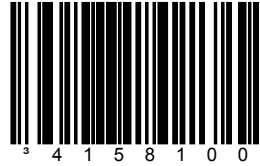

57600 BAUD Rate




38400 BAUD Rate

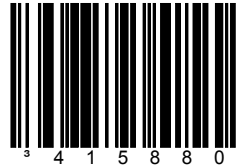

19200 BAUD Rate



14400 BAUD Rate

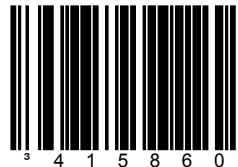

## SECTION G

## BAUD RATES

\* 9600 BAUD Rate



4800 BAUD Rate




2400 BAUD Rate




1200 BAUD Rate



600 BAUD Rate

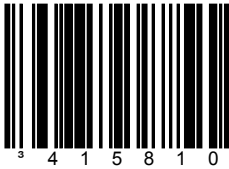


300 BAUD Rate

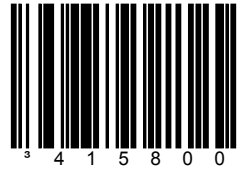



\* 7 Data Bits

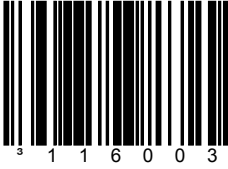

8 Data Bits




Number of data bits transmitted for each character.

1 Stop Bit




\* 2 Stop Bits

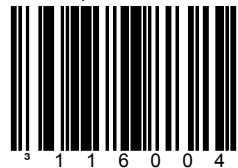

## SECTION G

## HARDWARE HANDSHAKING

Enable RTS/CTS  
Handshaking

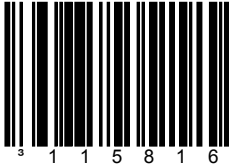


Output a **R**quest to **S**end (RTS) signal and wait for a **C**lear To **S**end (CTS) signal before transmitting data.

\* Disable RTS/CTS  
Handshaking




Do not use RTS/CTS handshaking.

\* Character RTS/CTS

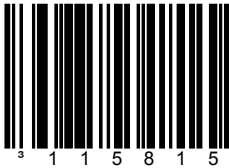


Activate/Deactivate RTS signal for each character.

Message RTS/CTS

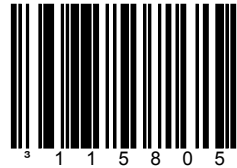

Activate RTS before sending the first character and leave it active until after the last character has been transmitted.

Invert RTS Polarity (RSV1)

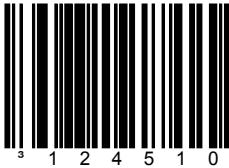

+12V = Inactive  
-12V = Active

\* Standard RTS Polarity



Use standard RTS polarity  
-12V = Inactive  
+12V = Active

Invert CTS Polarity (RSV2)



+12V = Inactive, do not send

-12V = Active, OK to send


\* Standard CTS Polarity



-12V = Inactive, do not send


+12V = Active, OK to send

Activate RTS, Do Not wait for CTS (RSV3)

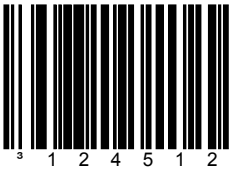

Activate RTS for transmission but do not wait for CTS to send.

\* Activate RTS, Wait for CTS

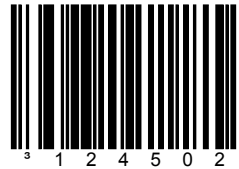


Wait for CTS after activating RTS.

Test CTS Not Present Before RTS (RSV4)



Do not activate RTS if CTS is already present.

\* Do Not Test for CTS Present Before RTS

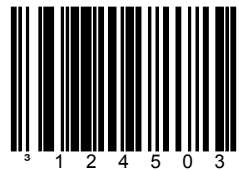


Activate RTS without testing if CTS is already active.

## SECTION G

## HARDWARE HANDSHAKING

## CTS Scan Transmit

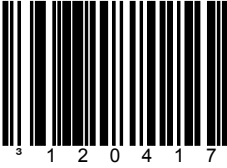

The CTS line is used to allow a decoded bar code to be transmitted. Use reserved code 4 to ensure 1 bar code per CTS. This will prevent the scanner from gathering data until the CTS signal has been retracted.



This feature is not available with all models.

## \* No CTS Scan Transmit





Do not support CTS scan transmit.

## Enable DTR Support



The scanner will stop scanning when the Data Terminal Ready (DTR) signal goes inactive.

## \* Disable DTR Support

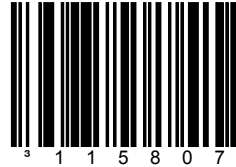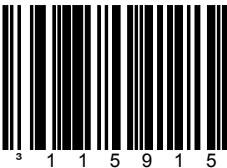Enable  
RTS Counter Toggle

The scanner will toggle the RTS line on a good decode.


\* Disable  
RTS Counter Toggle

Enable XON/XOFF  
Handshaking



The scanner will stop transmission whenever an XOFF (ASCII 13H) is received. Transmission will resume after an XON (ASCII 11H) is received.

\* Disable XON/XOFF  
Handshaking

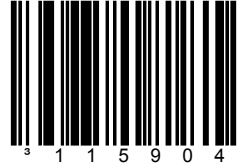

The scanner will not test for XON/XOFF.

Enable ACK/NAK




After transmitting data, wait for an ACK (06H) or a NAK (15H) response from the host.

If ACK is received, complete the communications cycle and look for more bar codes.

If NAK is received, retransmit the last set of bar code data and wait for ACK/NAK again.

\* Disable ACK/NAK

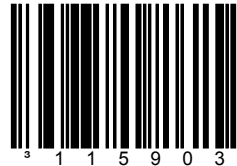

Do not support ACK/NAK handshaking.

## SECTION G


## SOFTWARE HANDSHAKING

## Enable O/N Handshaking




ACK/NAK handshaking (page G 9) must be enabled for this feature to work.

## Support BEL/CAN in ACK/NAK

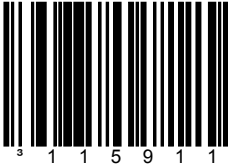

When BEL (07H) is received, the scanner beeps 3 times and exits the communications loop. If a CAN (18H) is received, then the scanner will exit the communications loop, silently.

## Enable Razz Command

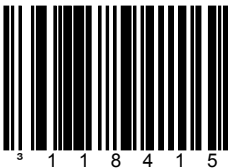

When a z is received, the scanner will RAZZ once. Multiple razzes can be sounded if the character before the z is a number and is sent within 1 second of the z.




The normal BEL commands must be activated for feature.

## Disable O/N Handshaking




## \* Ignore BEL/CAN in ACK/NAK

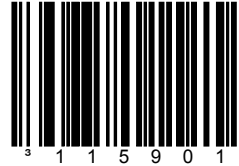


Ignore BEL/CAN characters in communication loop.

## Disable Razz Command

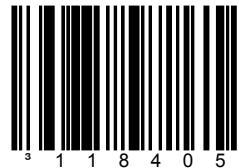


Ignore z characters in communication loop.

Enable XON/XOFF  
Scan Inhibit On

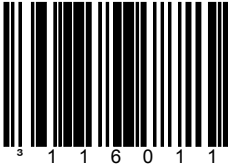

\* Disable XON/XOFF  
Scan Inhibit Off

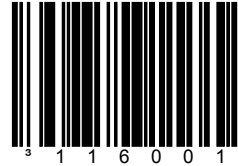


This feature is not available with all models.



This feature is not available with all models.

Enable 5 Retries on  
ACK/NAK Time Out

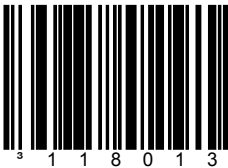


\* Disable 5 Retries on  
ACK/NAK Time Out




Allow up to 5 NAK retransmissions of the data before dropping out of the communications loop.

Do not limit retransmission to 5 NAK cycles.

Enable 5 NAK Retries

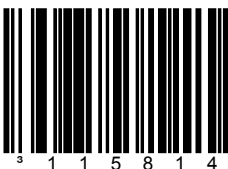

Disable 5 NAK Retries

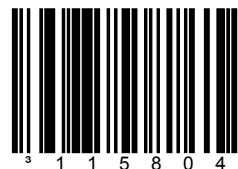

## SECTION G

## MISCELLANEOUS

Enable French PC Term




The scanner transmits PC type make/break scan codes instead of ASCII data characters. The scan codes match a WYSE French PC Terminal Emulation.

\* Disable French PC Term



Do not transmit in French PC Term Mode.

Enable USA Wyse PC

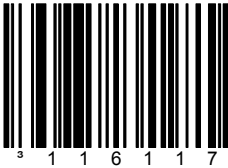

Enables USA Wyse PC style keyboard PCTERM mode.

Disable USA Wyse PC




Disables USA Wyse PC style keyboard PCTERM mode.

\* Enable Receive Data



Disable Receive Data

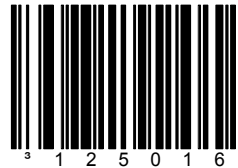

Disable receive port after 5 seconds.




### Load Keyboard Wedge Defaults



Loads default settings for keyboard wedge mode.

### Enable Stand-Alone Keyboard Emulation

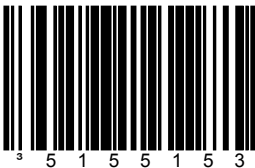

Use this with special stand-alone models that are not cabled for an external keyboard. When the Stand-Alone Mode is enabled, the scanner will send keyboard "power on" information and configure hardware to simulate a constant keyboard connection.

### \* Enable Keyboard Wedge Emulation




Use this with an external keyboard. Transmit in wedge mode to allow standard PC keyboards to communicate when no bar code data is available.

## SECTION H

## COUNTRY/SCAN CODE TABLE SELECTS

\* USA Keyboard

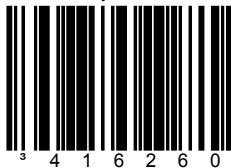


Enable USA Keyboard.

Switzerland Keyboard




Enable Swiss Keyboard

Spain Keyboard

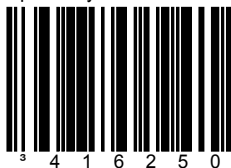


Enable Spanish Keyboard

Italy Keyboard

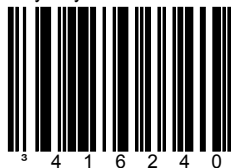


Enable Italian Keyboard

Germany Keyboard

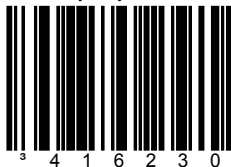

Enable German Keyboard

France Keyboard

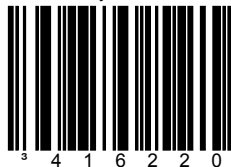

Enable French Keyboard

UK Keyboard



Enable UK Keyboard.

Belgium Keyboard




Enable Belgium Keyboard

Japanese Keyboard



Enable Japanese Keyboard

IBM 4700 Financial Keyboard

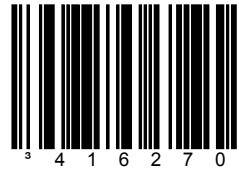

Enable IBM 4700 Financial Keyboard

Sweden/Finland Keyboard




Enable Sweden/Finland Keyboard

## SECTION H

## KEYBOARD/SYSTEM TYPE

## \* AT Keyboard

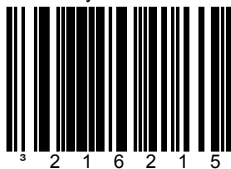


If using an AT computer, scan the above bar code. (Includes IBM PS/2 and compatible models 50, 55, 60, 80)

## XT Keyboard




If using an XT computer, scan the above bar code.

## PS/2 Keyboard

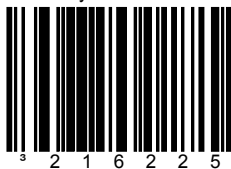


Scan the above code for PS/2 computer. (Includes IBM PC and compatible models 30, 70 and 8556)

## Terminal KB Emulation

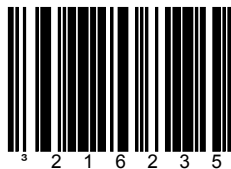


Scan the above code to enable terminal keyboard emulation mode.

Transmit  
Make Code Only

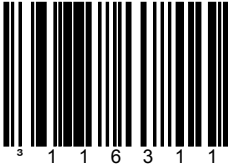


**i** Do not scan unless instructed by a Metrologic representative.

\* Transmit  
Make/Break Code

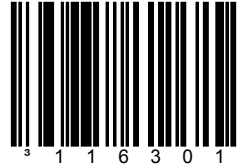


**i** Do not scan unless instructed by a Metrologic representative.

Do Not Transmit  
F0H Break Code

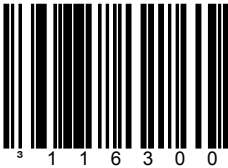


The scanner will not transmit the F0H in the break-code sequence.

\* Transmit  
F0H Break Code

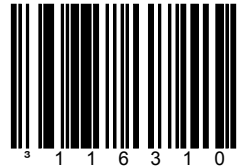


The scanner will transmit the F0H in the break-code sequence.

Transmit Cleanup Bit

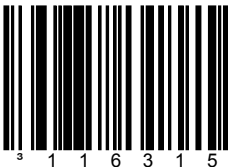

Use for certain NEC computers.

\* Do Not Transmit  
Cleanup Bit

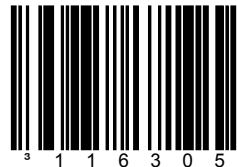

## SECTION H

## SPECIAL KEYBOARD FEATURES

## Enable Alt Mode



The scanner will duplicate the following keyboard sequence:


*Hold down ALT key and Type decimal number that corresponds to the appropriate character.*

## \* Disable Alt Mode




**i** Caution: If the host software application uses the right ALT key as a “Hot” key, ALT mode must be disabled.

## Enable Auto Detect Mode (AT/PS2)

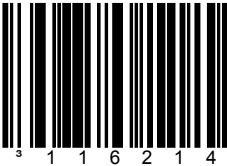


Automatically detects caps lock status.

## \* Disable Auto Detect Mode (AT/PS2)

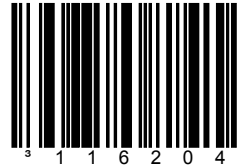

The Auto Detect Caps Lock feature is not supported.

Enable Caps Lock (XT)

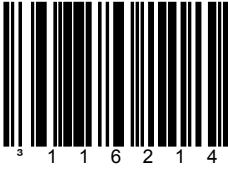

\* Disable Caps Lock (XT)




The Caps Lock feature is not supported.

Send Numbers as Keypad Data




All data is sent as if it has been entered on a keypad.


\* Send Numbers as Normal Data

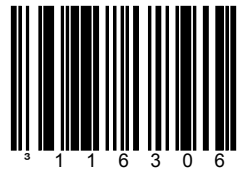

Enable Reserved Feature

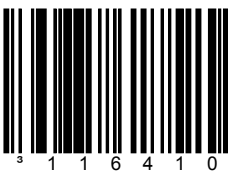


\* Disable Reserved Feature

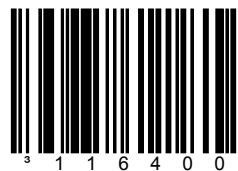

## SECTION H


## SPECIAL KEYBOARD FEATURES

- \* Use Extended ASCII to Send Extended Key Codes

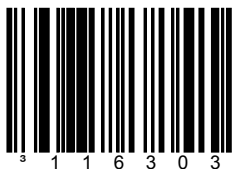


Use extended ASCII characters to send PC keyboard keys such as F1, F2, etc... See section M for details.

- Use Extended ASCII Characters as Extended ASCII

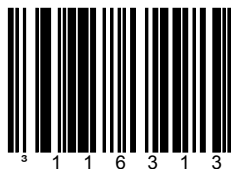

Transmit extended ASCII codes via ALT mode.

- \* Character KB Inhibit

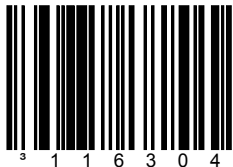


- Message KB Inhibit





Inter-Scan Code Delay  
800 Microseconds

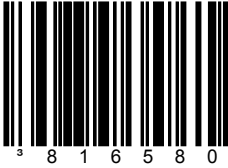


The time specified represents the amount of time between individual 9 bit-scan codes.



This parameter may need to be adjusted for operation with certain PC keyboard BIOS.

Inter-Scan Code Delay  
7.5 msec

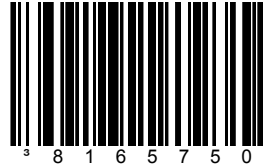


The time specified represents the amount of time between individual 9 bit-scan codes.



This parameter may need to be adjusted for operation with certain PC keyboard BIOS.

Inter-Scan Code Delay  
15 msec

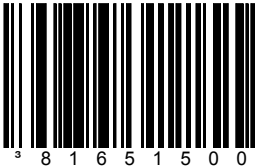

The time specified represents the amount of time between individual 9 bit-scan codes.



This parameter may need to be adjusted for operation with certain PC keyboard BIOS.

~ Variable Inter-Scan  
Code Delay msec



Refer to the Multi-Code Configuration method on page x.

## SECTION H

## CONTROL SETS


In general, standard bar code symbologies will only encode the ASCII character set. Function keys, arrow keys and many other “extended” keys on an IBM compatible keyboard do not translate to ASCII characters. One method of “bar coding” the extended keys is to substitute the extended key codes when a specific ASCII control character found in the bar code stream. The Control Sets are specific translation of the ASCII (HEX) set.

## CONTROL SET #1

Enable Control Set #1



Disable Control Set #1

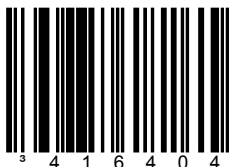

ASCII (HEX)	ASCII Control	Extended Key
00H	Null	Numeric Keypad
01H	SOH	Num Lock
02H	STX	Down
03H	ETX	Numeric Keypad
04H	EOT	Insert
05H	ENQ	Delete
06H	ACK	System Request
07H	BEL	←
08H	BS	→
09H	TAB	Tab
0AH	LF	Caps Lock
0BH	VT	Shift Tab
0CH	FF	Alt
0DH	CR	Enter
0EH	SO	Control
0FH	SI	Up Arrow
10H	DLE	F1
11H	DC1	F2
12H	DC2	F3
13H	DC3	F4
14H	DC4	F5
15H	NAK	F6
16H	SYN	F7
17H	ETB	F8
18H	CAN	F9
19H	EM	F10
1AH	SUB	Home
1BH	ESC	Esc
1CH	FS	Page Up
1DH	GS	Page Down
1EH	RS	Print Screen
1FH	US	End

SECTION H


**3151 TERMINAL KEYBOARD**

---

\* 3151 Terminal Keyboard



Load OCIA Defaults

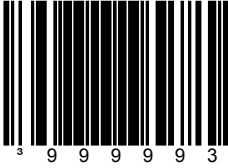

Enable OCIA




Select this option if communications require OCIA (Optically Coupled Interface Adapter).




This serial interface is clocked by the host.


Enable DTS/Siemens

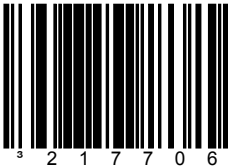


\* Enable DTS/Nixdorf

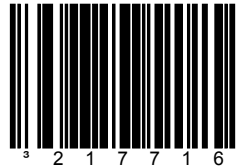

Enable NCR-S

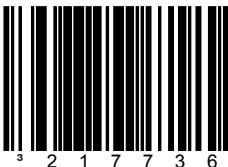


Enable NCR-F

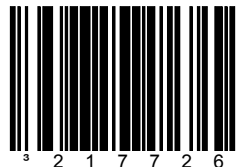



## Enable Light Pen Mode

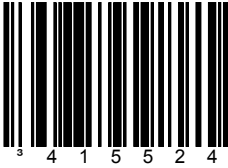


Select this option if the scanner will be used in place of a light pen. It provides light pen emulation of each bar code scanned.


## \* Bars High



## Spaces High

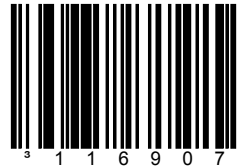


## Transmit Code 39

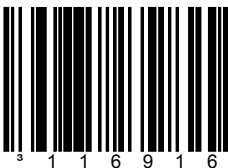

All bar codes will be decoded then transmitted as code 39 bar codes.

## \* Transmit as Scanned

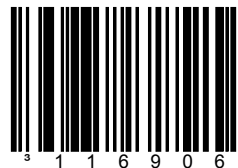

All bar codes will be decoded and transmitted in their original symbology.

## SECTION J

## LIGHT PEN/SET NARROW ELEMENT BORDER

Poll Light Pen Source




The scanner waits for an active source voltage before transmitting data.

\* Do Not Poll Light Pen Source




The scanner will not wait for an active source voltage before transmitting data.

Enable Light Pen Extra Toggle

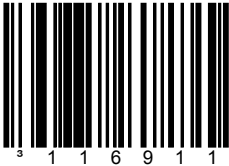


The scanner beeps and toggles the light pen data line with an extra data pulse to condition the decoder.

\* Disable Light Pen Extra Toggle

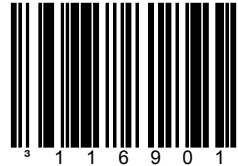


10x Narrow Element Border

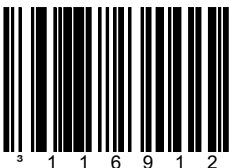

This bar code allows the transmission of Light Pen/Wand emulation using a 10x border.

\* 50x Narrow Element Border

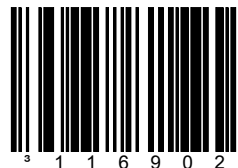


This bar code allows the transmission of Light Pen/Wand emulation using a 50x border.




## SECTION J SET NARROW ELEMENT WIDTH /LASER EMULATION

\* 1 ms  
Narrow Element Width

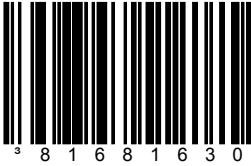


This option allows the transmission of Light/Pen Wand emulation a 1 ms narrow element width.

60  $\mu$ s  
Narrow Element Width

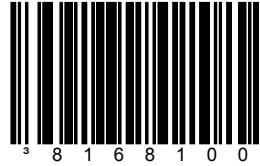


This transmits at 60  $\mu$ s narrow element width.

100  $\mu$ s  
Narrow Element Width

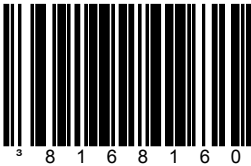

This transmits at 100  $\mu$ s narrow element width.

500  $\mu$ s  
Narrow Element Width

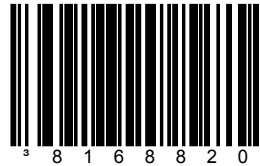


This transmits at 500  $\mu$ s narrow element width.

~ Variable  
Narrow Element Width †



† Refer to the Multi-Code Method on page x.


Laser Emulation

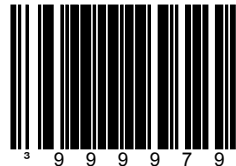

Sets the minimum x-dimension in 6  $\mu$ s increments. Scan this code followed by a 3 digit code byte sequence found in Section M. †




Load  
IBM 46xx Defaults

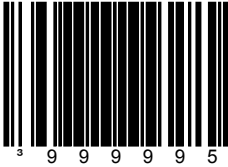

Load default format settings  
for IBM 46xx systems.

Enable IBM 46xx  
Communication

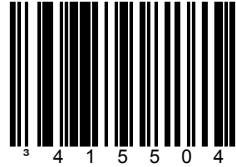

Select this option for IBM  
46xx SIOC/RS485  
communication.




Not all scanners  
support this interface.  
The correct interface  
board is required.


IBM Port 17B  
3687-2 In Counter




IBM Port 5B  
1520 HH Laser

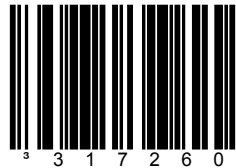

\* IBM Port 9B  
4500 CCD HH BCR1

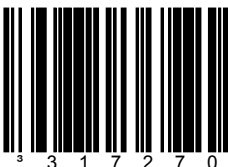

IBM Port 9B  
4501 CCD HH BCR2

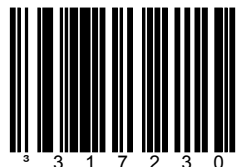

## SECTION K

## IBM RESERVE CODES

IBM Reserve #1




IBM Reserve #2



IBM Reserve #3



IBM Reserve #5

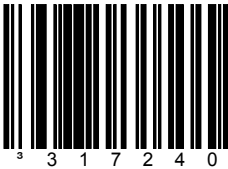

User configurable prefixes, symbol length and other features that use these code bytes for configuration, require that the scanner be in configuration mode. Scan the Enter/Exit Configuration Mode bar code before starting the configuration cycle. Single code configuration mode does not work for these multi-code sequences.



## EXAMPLE

User configurable prefix/suffix characters (Section E) can be saved into the scanner by scanning the 3 digit decimal equivalent of the ASCII character into the appropriate character location with the code byte bar codes.


To add an asterisk (\*) as a prefix scan the following bar codes in order:

1. Enter/Exit Configuration Mode (3 beeps)
2. Configurable Prefix 1 (1 beep)
3. Code Byte 0 (1 beep)
4. Code Byte 4 (2 beeps)
5. Code Byte 2 (3 beeps)
6. Enter/Exit Configuration Mode (3 beeps)

## SECTION M

## CODE BYTES 0-5


Code Byte 0

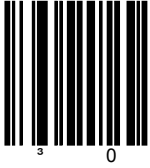


Code Byte 1




Code Byte 2

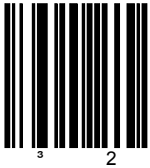

Code Byte 3

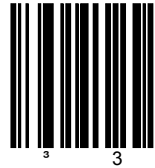

Code Byte 4

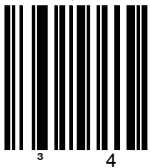

Code Byte 5




Code Byte 6




Code Byte 7



Code Byte 8

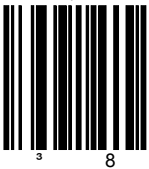


Code Byte 9

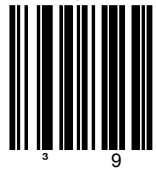

## SECTION M

## RESERVED CODES

~ Enable Reserved Code

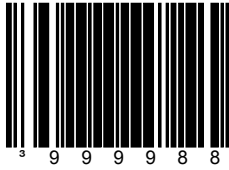

Contact a Metrologic customer service representative for additional details on this feature.

~ Disable Reserved Code





CODE BYTE	CODE TYPES
004	UPC-A
002	UPC-E
003	EAN-8
005	EAN-13
080	Code 39
081	Codabar
082	Interleaved 2 of 5
083	Code 128
084	Code 93
091	MSI Plessey
092	Code 11
093	Airline 2 of 5 (15 digits)
094	Matrix 2 of 5
095	Telepen
096	UK Plessey
098	Standard 2 of 5
097	Airline (13 digits)
099	TRI-OPTIC

## SECTION M

## ASCII REFERENCE TABLE

HEX VALUE	DECIMAL VALUE/ CODE BYTE VALUE	CHARACTER	CONTROL KEYBOARD EQUIVALENT
00	000	NUL	@
01	001	SOH	A
02	002	STX	B
03	003	ETX	C
04	004	EOT	D
05	005	ENQ	E
06	006	ACK	F
07	007	BEL	G
08	008	BS	H
09	009	HT	I
0A	010	LF	J
0B	011	VT	K
0C	012	FF	L
0D	013	CR	M
0E	014	SO	N
0F	015	SI	O
10	016	DLE	P
11	017	DC1	Q
12	018	DC2	R
13	019	DC3	S
14	020	DC4	T
15	021	NAK	U
16	022	SYN	V
17	023	ETB	W
18	024	CAN	X
19	025	EM	Y
1A	026	SUB	Z

HEX VALUE	DECIMAL VALUE/ CODE BYTE VALUE	CHARACTER	CONTROL KEYBOARD EQUIVALENT
1B	027	ESC	[
1C	028	FS	\
1D	029	GS	^
1E	030	RS	_
1F	031	US	
20	032	SP	space, blank
21	033	!	
22	034	"	
23	035	#	
24	036	\$	
25	037	%	
26	038	&	
27	039	'	apostrophe
28	040	(	
29	041	)	
2A	042	*	
2B	043	+	
2C	044	,	comma
2D	045	-	minus
2E	046	.	period
2F	047	/	
30	048	0	number zero
31	049	1	number one
32	050	2	
33	051	3	
34	052	4	
35	053	5	

## SECTION M

## ASCII REFERENCE TABLE

HEX VALUE	DECIMAL VALUE/ CODE BYTE VALUE	CHARACTER	CONTROL KEYBOARD EQUIVALENT
36	054	6	
37	055	7	
38	056	8	
39	057	9	
3A	058	:	
3B	059	;	
3C	060	<	less than
3D	061	=	
3E	062	>	greater than
3F	063	?	
40	064	@	shift P
41	065	A	
42	066	B	
43	067	C	
44	068	D	
45	069	E	
46	070	F	
47	071	G	
48	072	H	
49	073	I	letter I
4A	074	J	
4B	075	K	
4C	076	L	
4D	077	M	
4E	078	N	

HEX VALUE	DECIMAL VALUE/ CODE BYTE VALUE	CHARACTER	CONTROL KEYBOARD EQUIVALENT
4F	079	O	letter O
50	080	P	
51	081	Q	
52	082	R	
53	083	S	
54	084	T	
55	085	U	
56	086	V	
57	087	W	
58	088	X	
59	089	Y	
5A	090	Z	
5B	091	[	shift K
5C	092	\	shift L
5D	093	]	shift M
5E	094	^	↑, shift N
5F	095	_	←, shift O, underscore
60	096	`	accent grave
61	097	a	
62	098	b	
63	099	c	
64	100	d	
65	101	e	
66	102	f	
67	103	g	
68	104	h	
69	105	i	

## SECTION M

## ASCII REFERENCE TABLE

HEX VALUE	DECIMAL VALUE/ CODE BYTE VALUE	CHARACTER	CONTROL KEYBOARD EQUIVALENT
6A	106	j	
6B	107	k	
6C	108	l	
6D	109	m	
6E	110	n	
6F	111	o	
70	112	p	
71	113	q	
72	114	r	
73	115	s	
74	116	t	
75	117	u	
76	118	v	
77	119	w	
78	120	x	
79	121	y	
7A	122	z	
7B	123	{	
7C	124		vertical slash
7D	125	}	alt mode
7E	126	~	(alt mode)
7F	127	DEL	delete, rubout

KEY	AT SCAN CODE	PS2 SCAN CODE	3151	PREFIX/SUFFIX VALUE HEX = DECIMAL
↑	75H	48H	63H	80H = 128
↓	72H	50H	60H	81H = 129
→	74H	4DH	6AH	82H = 130
←	6BH	4BH	61H	83H = 131
Insert	70H	52H	67H	84H = 132
Delete	71H	53H	64H	85H = 133
Home	6CH	47H	6EH	86H = 134
End	69H	4FH	00H	87H = 135
Page Up	7DH	49H	00H	88H = 136
Page Down	7AH	51H	00H	89H = 137
Right Alt	11H	38H	00H	8AH = 138
Right Ctrl	14H	1DH	39H	8BH = 139
Reserved	00H	00H	00H	8CH = 140
Reserved	00H	00H	00H	8DH = 141
Numeric Keypad Enter	5AH	1CH	79H	8EH = 142
Numeric Keypad /	4AH	35H	00H	8FH = 143
F1	05H	3BH	07H	90H = 144
F2	06H	3CH	0FH	91H = 145
F3	04H	3DH	17H	92H = 146
F4	0CH	3EH	1FH	93H = 147
F5	03H	3FH	27H	94H = 148
F6	0BH	40H	2FH	95H = 149
F7	83H	41H	37H	96H = 150
F8	0AH	42H	3FH	97H = 151
F9	01H	43H	47H	98H = 152
F10	09H	44H	4FH	99H = 153
F11	78H	57H	56H	9AH = 154
F12	07H	58H	5EH	9BH = 155
Numeric +	79H	4EH	00H	9CH = 156

## SECTION M

## EXTENDED KEY CODE REFERENCE TABLE

KEY	AT SCAN CODE	PS2 SCAN CODE	3151	PREFIX/SUFFIX VALUE HEX = DECIMAL
Numeric -	7BH	4AH	7CH	9DH = 157
Numeric *	7CH	37H	00H	9EH = 158
Caps Lock	58H	3AH	14H	9FH = 159
Num Lock	77H	45H	00H	A0H = 160
Left ALT	11H	38H	00H	A1H = 161
Left CTRL	14H	1DH	11H	A2H = 162
Left Shift	12H	2AH	12H	A3H = 163
Right Shift	59H	36H	59H	A4H = 164
Print Screen	Multiple	00H	00H	A5H = 165
Tab	0DH	0FH	0DH	A6H = 166
Shift Tab	8DH	8FH	65H	A7H = 167
Enter	5AH	1CH	5AH	A8H = 168
ESC	76H	01H	08H	A9H = 169
Left ALT Make	11H	36H	00H	AAH = 170
Left ALT Break	11H	B6H	00H	ABH = 171
Left CTRL Make	14H	1DH	00H	ACH = 172
Left CTRL Break	14H	9DH	00H	ADH = 173
* Left ALT + 1 character	11H	36H	00H	AEH = 174
* Left CTRL + 1 character	14H	1DH	00H	AFH = 175
* Send			58H	C0H = 192
Clear			6FH	C1H = 193
Jump			76H	C2H = 194
Send Line			7EH	C3H = 195
Erase EOF			6DH	C4H = 196
Send - Make Only			58H	C5H = 197

\* Example:

1<sup>st</sup> Configurable Prefix = 174

2<sup>nd</sup> Configurable Prefix = 065

Scanner will transmit <left ALT Make> "A" <Left ALT Break>



Metrologic manufactures several scanners for OEM applications. These scanners may use a different set of defaults than the standard Metrologic factory defaults. Scanning the following bar codes will restore the default factory settings.

Enable Factory Defaults



Scan this code followed by the “Recall Defaults” code to enable and load Metrologic factory defaults.


Recall Defaults



## SECTION N


## CUSTOM DEFAULTS

## Ruby Verifone Defaults

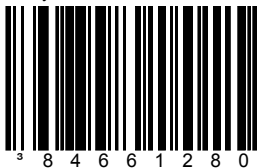


Scan this code followed by the "Recall Defaults" code to enable and load Ruby Verifone Defaults.

## RCH

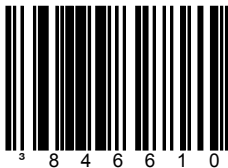


Scan this code followed by the "Recall Defaults" code to enable and load RCH Defaults.

## Sanyo

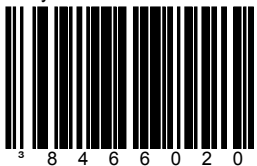


Scan this code followed by the "Recall Defaults" code to enable and load Sanyo Defaults.

## Gilbarco

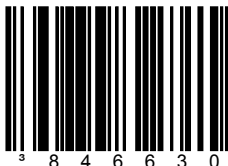


Scan this code followed by the "Recall Defaults" code to enable and load Gilbarco Defaults.

## ALT Defaults

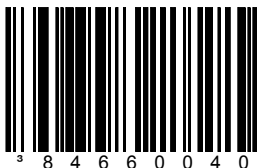


Scan this code followed by the "Recall Defaults" code to enable and load ALT Defaults.

## MS6750 Defaults

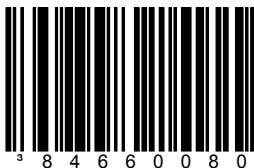


Scan this code followed by the "Recall Defaults" code to enable and load MS6750 Defaults.

German Post Defaults

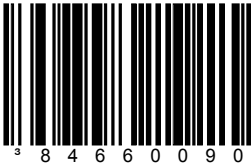


Scan this code followed by the "Recall Defaults" code to enable and load German Post Defaults.

Custom Keyboard FR1

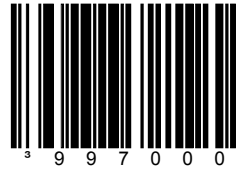

Custom Terminal FR1

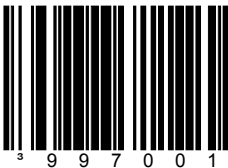

## SECTION N

## SERIAL PROGRAM MODE

For Serial Program Mode, all commands must be framed by an STX (02 Hex) and ETX (03 Hex). To recall defaults:

1. Transmit <STX>999999<ETX> through the Serial Port. This will put the scanner in serial program mode. Scanning will be suspended and the scanner will respond with an ACK (06 Hex).
2. Transmit <STX>999998<ETX> through the Serial Port. This is the Recall Default bar code in the MetroSelect guide. The scanner will respond with an ACK (06 Hex).
3. Transmit <STX>999999<ETX> through the Serial Port. This will cause the scanner to exit program mode and save the new settings. The scanner will beep 3 times and send an ACK (06 Hex).

If at anytime, the scanner cannot recognize a command, it will respond with a NAK (15 Hex).

## SOFTWARE/SERIAL NUMBER

## Software Number



The scanner will transmit its software revision.

## Scanner Information



This barcode will transmit the "main" & "interface coprocessor" software numbers as well as the scanner's serial number.

The data is output as barcode (formatted) data (ie. 15xxx/15xxx/9876543210, where  $x$  represents any non-numbered value).

\* Disable AUX Port



## AUX PORT AND SECONDARY DEVICE DATA FORMATS



The following section includes features that are not available with all Metrologic scanner models. Please contact a customer service representative for additional information and technical assistance.

### When using a Metrologic device as a secondary:

Follow **Step 1** to configure the *auxiliary port* to accept a Metrologic scanner as the *secondary* scanner. Then follow **Step 2** to configure the *secondary* scanner to match the auxiliary port's data format.


If the secondary scanner is not a Metrologic scanner go to page 3 and follow the instructions under “When using a non-Metrologic RS-232 Device as a secondary”.



The auxiliary input port's data format must match the main output format of the secondary scanner.

**Step 1:** Scan the following bar code to enable the *auxiliary port* on the *primary* scanner.

AUX Port Data Format

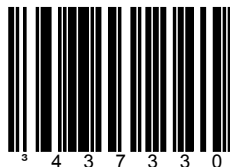


## SECTION 0 AUX PORT AND SECONDARY DEVICE DATA FORMATS


---

**Step 2:** Then scan the following bar codes, in order, to configure the *secondary* scanner.


1. Enable AUX Output

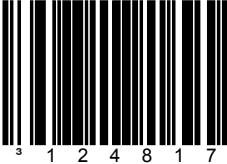


2. Secondary Scanner Data Format

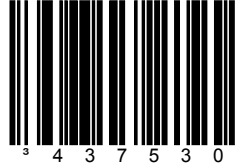

3. Enable Comm Timeouts

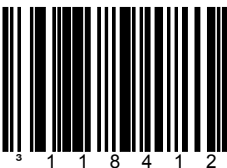

4. Turn OFF Auxiliary Scanner's Beeper (Optional)

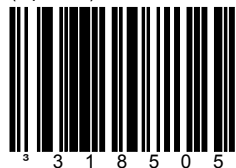

## SECTION O AUX PORT AND SECONDARY DEVICE DATA FORMATS




The following section includes features that are not available with all Metrologic scanner models. Please contact a customer service representative for additional information and technical assistance.

### When using a non-Metrologic RS-232 device as a secondary:

Scan the following bar code to enable the auxiliary port on the *primary* scanner.

AUX Port General RS-232 Format

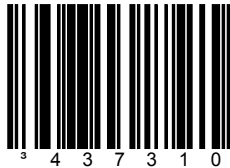

The *auxiliary* input port's data format must match the main output format of the secondary device. The *secondary* device must be capable of RTS/CTS handshaking and have a carriage return (ASCII 0DH) terminator on the data.



The default settings for the *AUX Port General RS-232 Format* are:


- 38400 baud
- 7 data bits
- 2 stop bits
- Space parity

## SECTION O ADDITIONAL AUXILIARY PORT DATA FORMATS



The auxiliary input port's data format must match the main output format of the secondary device.


Enable AUX Port with UPC  
Supplemental Data Format

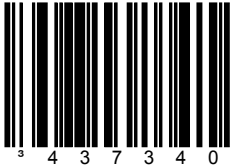


Enable AUX Port with Code  
Select Data Format




Enable AUX Port with Tech 7,  
8 Data Format

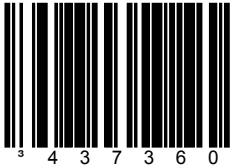


Enable AUX Port with  
Reserved 2 Data Format

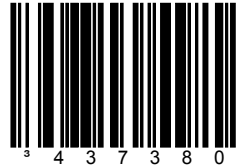

Enable AUX Port  
with Reserved 3 Data Format

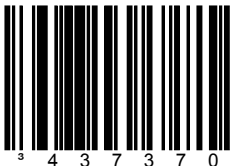

Enable AUX Port with  
Reserved 1 Data Format

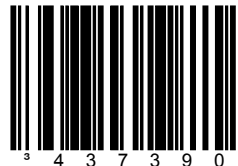



Enable AUX Port with Stratos  
Decode Data Format



## SECTION O

## AUXILIARY PORT BAUD RATES


AUX 115200 Baud Rate




AUX 57600 Baud Rate




AUX 38400 Baud Rate

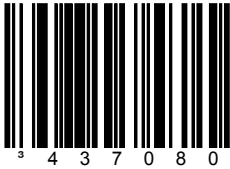

AUX 19200 Baud Rate

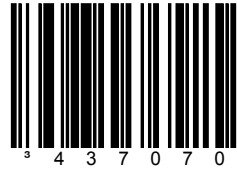

AUX 14400 Baud Rate

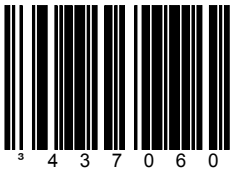

AUX 9600 Baud Rate



AUX 4800 Baud Rate



AUX 2400 Baud Rate




AUX 1200 Baud Rate



AUX 600 Baud Rate



AUX 300 Baud Rate

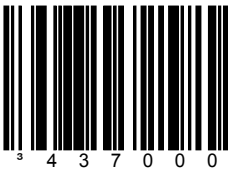

## SECTION O

## AUXILIARY PORT PARITY

AUX No Parity




AUX Mark Parity



\* AUX Space Parity



AUX Even Parity

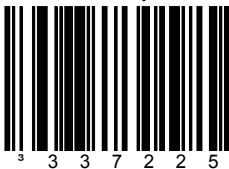


AUX Odd Parity




AUX 1 Stop Bit



\* AUX 2 Stop Bits

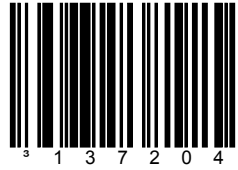

\* AUX 7 Data Bits

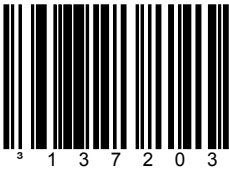

AUX 8 Data Bits



## SECTION O

## AUXILIARY RTS/CTS AND MODE 7

\* Enable AUX RTS/CTS Handshaking



Disable AUX RTS/CTS Handshaking



Message AUX RTS/CTS



\* Character AUX RTS/CTS



Enable AUX Port Mode 7



Disable AUX Port Mode 7



Mode 7 enables reception of prefix and suffix codes when AUX port RTS/CTS handshaking is disabled.

Enable  
AUX "D/E" Commands



\* Disable  
AUX "D/E" Commands



Enable AUX "F/L"  
Commands



\* Disable AUX "F/L"  
Commands



Enable AUX  
"M/O" Commands



\* Disable AUX  
"M/O" Commands



## SECTION O

## AUXILIARY XON/XOFF AND ACK/NAK

\* Enable AUX XON/XOFF Handshaking



Disable AUX XON/XOFF Handshaking



\* Enable AUX ACK/NAK Commands



Disable AUX ACK/NAK Commands





\* Normal  
AUX CTS Polarity



Flip  
AUX CTS Polarity



\* Normal  
AUX RTS Polarity



Flip  
AUX RTS Polarity



## AUXILIARY SAME SYMBOL TIMEOUT

\* AUX has  
Same Symbol Timeout



No AUX  
Same Symbol Timeout



This feature skips the same symbol timeout in the master when the auxiliary scanner scans (or repeats) faster than the same symbol timeout in the master scanner.




Metrologic recommends turning off the auxiliary scanner's beep if the *AUX Same Symbol Timeout* feature is disabled.

## SECTION O MAIN OUTPUT PORT AUXILIARY DATA FORMATS

When a scanner is used as a secondary scanner to another scanner's auxiliary input, the output data can be in one of the following formats.

Reserve Code 32

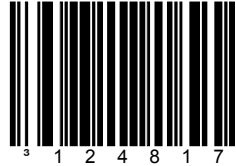


This is a quick method for setting reserve Code 32 in the secondary scanner using HoloTrak Decode Data Format.



**This code should not be used for the MS6720.**


\* HoloTrak Decode Output  
AUX Data Format

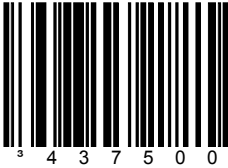


UPC Supplemental Output  
AUX Data Format



Stratos Decode Output  
AUX Data Format

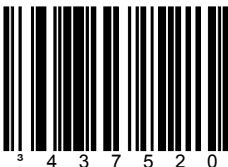

Code Select Output  
AUX Data Format

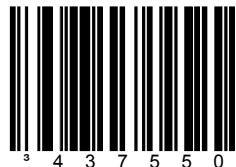

## SECTION O

## MAIN OUTPUT PORT AUXILIARY DATA FORMATS

---


TECH 7 & 8 Output AUX  
Data Format




Reserved 1 Output AUX  
Data Format



Reserved 2 Output  
AUX Data Format

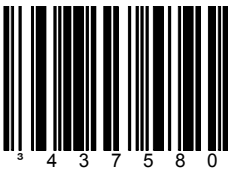

Reserved 3 Output  
AUX Data Format

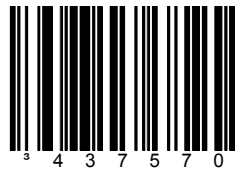

## SECTION O

## INTER-CHARACTER DELAYS

No AUX Port  
Inter-Character Delays




\* 1 msec AUX Port  
Inter-Character Delay



10 msec AUX Port  
Inter-Character Delay



25 msec AUX Port  
Inter-Character Delay

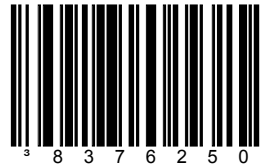

~ Variable AUX Port  
Inter-Character Delay




The Delay between characters being sent out of the auxiliary port can be set in 1 millisecond increments by scanning the *Variable AUX Port Inter-character Delay* barcode followed by a 3 character sequence of code bytes that range from 001 to 255 milliseconds.

Refer to the *Multi-Code Configuration Method* on page x.

Enable Full Speed USB




Full Speed USB Defaults

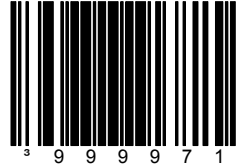

Adds the ability to encode scanner serial number in NOVRAM.

Load Integrated Full Speed USB Defaults

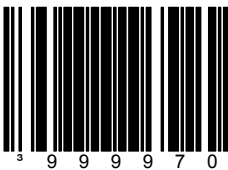


## SECTION P


## FULL SPEED USB

The following codes can be used if the *Full Speed USB Default* bar code has **not** been scanned.


Enable USB IBM ID

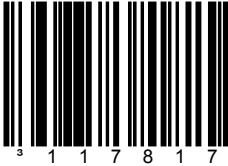

\* Disable USB IBM ID

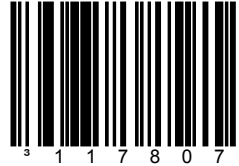


\* Enhanced Code ID's

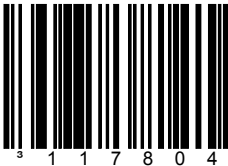


\* Legacy Code IDs



RS232 of USB Out

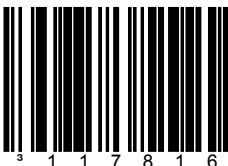


\* Normal USB Out

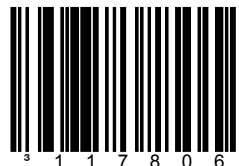

The following codes can be used if the *Full Speed USB Default* bar code has **not** been scanned.


Scanner 4A00h Flatbed

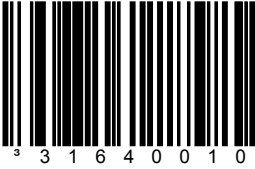

Scanner 4B00h Handheld



4A00h/6E00h  
Tabletop Scanner/Scale

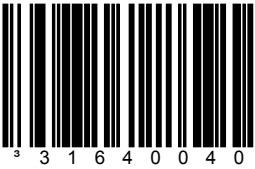

## SECTION P

## LOW SPEED USB


Enable  
Low Speed USB



Load Low Speed  
**External** USB Defaults




Load Low Speed  
**Internal** USB Defaults

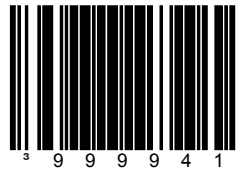

The following codes only apply to scanners with internal Low-Speed USB interfaces and specific software versions. Please contact a Metrologic representative for additional information on the use and restrictions of these bar codes.

USB  
Serial Emulation Mode

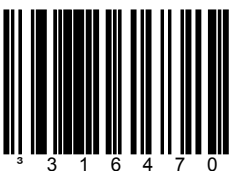

USB  
Keyboard Emulation Mode






The following bar codes are specific to the IS3480, MS3580 and the MS3780 unless otherwise noted.

**Button Modes**

\* Button Click Pattern  
Switching Mode

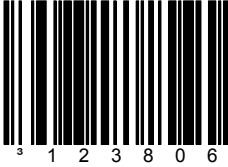


Button Hold Pattern  
Switching Mode




**Button Click Delay**


15 Second Time Out

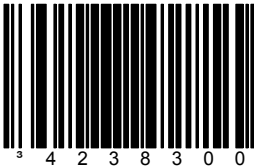

10 Second Time Out

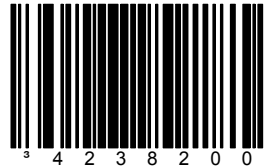

\* 5 Second Time Out

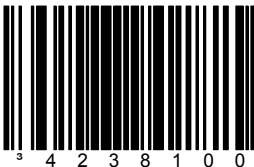

## SECTION R

## IS3480 / MS3580 / MS3780

The following bar codes are specific to the IS3480, MS3580 and the MS3780 unless otherwise noted.


Primary Scan Patterns

## \* Primary Omni




This bar code sets the **primary** pattern to all scan lines on for omnidirectional reading.

## Primary Raster

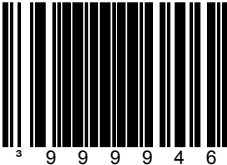

This bar code sets the **primary** pattern to horizontal raster.


## Primary Single-Line

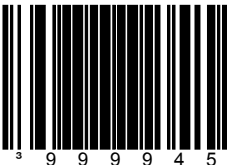

This bar code sets the **primary** pattern to single-line for menu reading.

Secondary Scan Patterns

## Secondary Omni

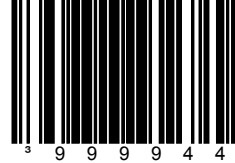


This bar code sets the **secondary** pattern to all scan lines on for omnidirectional reading.

## Secondary Raster



This bar code sets the **secondary** pattern to horizontal raster.

## Secondary Single-Line

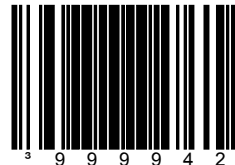

This bar code sets the **secondary** pattern to single-line for menu reading.

The following bar codes are specific to the IS3480, MS3580 and the MS3780 unless otherwise noted.

### Sweet Spot Mode

Enable Sweet Spot Mode




The sweet spot mode is used to determine where the maximum read rate point or “sweet spot” is located for a specific bar code type. Refer to the IS3480 Installation and User’s Guide (MLPN 00-02026) for a complete description of the sweet spot mode.




This feature is not available with the MS3580 or the MS3780.

### CodeGate® ( IS3480 / MS3580)

\* Enable CodeGate

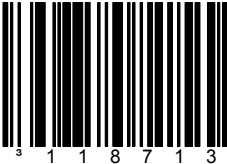


Disable CodeGate

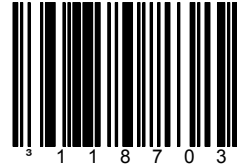

This barcode is not for use with the MS3780. Please see page R5 for CodeGate options specific to the MS3780.

### Depth of Field

\* Normal Depth of Field

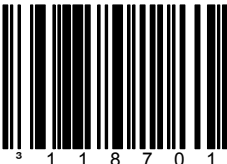

Reduced Depth of Field




## SECTION R

## IS3480 / MS3580 / MS3780

The following bar codes are specific to the IS3480, MS3580 and the MS3780 unless otherwise noted.

**IR Activation**

IR Activation

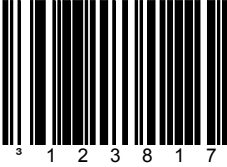


\* Disable IR Activation

**TTL RS232**

The following bar codes are only valid for the TTL RS232 Quantum series (IS/MS3x80-102).


Enable TTL RS232

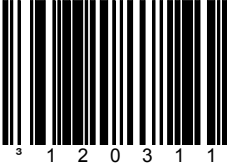

Disable TTL RS232



Invert TTL RxD and TxD

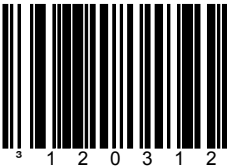

The TTL RxD and TxD pins  
idle at 0V

Std. TTL RxD and TxD




The TTL RxD and TxD pins  
idle at +5V

The following bar codes are specific to the MS3780 unless otherwise noted.

### CodeGate (MS3780)


\* Enable CodeGate  
Out-of-Stand,  
Primary Pattern Active

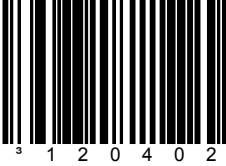


Disable CodeGate  
Out-of Stand,  
Primary Pattern Active




\* Enable CodeGate  
Out-of-Stand,  
Secondary Pattern Active

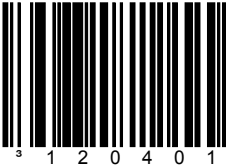


Disable CodeGate  
Out-of Stand,  
Secondary Pattern Active

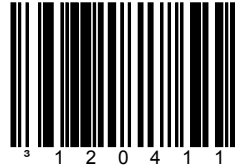

\* Enable CodeGate  
In-Stand

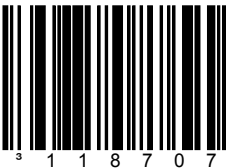

Disable CodeGate  
In-Stand

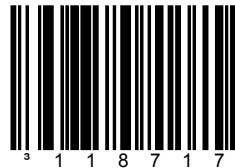



## Worldwide Headquarters

### Metrologic Instruments, Inc.

90 Coles Road • Blackwood, NJ 08012-4683 • Email: info@metrologic.com  
Tel: 856-228-8100 • Fax: 856-228-6673 (Sales) • Fax: 856-228-1879 (Marketing) • Fax: 856-228-0653 (Legal/Finance)

#### Metrologic Companies

**Adaptive Optics Associates  
(AOA)**  
Tel: 617-806-1400  
Fax: 617-806-1899  
Email: info@aoainc.com

**Omniplanar**  
Tel: 856.537.6100  
Fax: 856.537.6116  
Email: info@omniplanar.com

#### Metrologic - The Americas

**Metrologic The Americas**  
Tel: 1.856.537.6400  
Fax: 1.856.537.6474  
Email: info@us.metrologic.com

**Metrologic Canada**  
Tel: 416.752.7190  
Fax: 416.752.8060  
Email: info@ca.metrologic.com

**Metrologic Mexico, S.A. DE C.V.**  
Tel: 55.5365.6247  
Fax: 55.5362.2544  
Email: info@mx.metrologic.com

**Metrologic do Brasil Ltda.**  
Tel: 55.11.5182.7273  
Fax: 55.11.5182.7198  
Email: info@sa.metrologic.com

**Metrologic South America**  
Tel: 239.642.1958  
Fax: 239.642.1959  
Email: info@sa.metrologic.com

#### Metrologic GmbH

**Metrologic Instruments  
UK Limited**  
Tel: +44 (0) 1256 365900  
Fax: +44 (0) 1256 365955  
Email: info@uk.metrologic.com

**Metrologic Instruments GmbH**  
Tel: 49-89-89019-0  
Fax: 49-89-89019-200  
Email:  
info@europe.metrologic.com

**Metrologic Eria Iberica, SL**  
Tel: +34 913 272 400  
Fax: +34 913 273 829  
Email: info@es.metrologic.com

**Metrologic Instruments Italia**  
Tel: +39 0 57 6511978 or +39  
051 651 1978  
Fax: +39 0 51 6521337  
Email: info@it.metrologic.com

**Metrologic Eria France SA**  
Tel: +33 (0) 1 48.63.78.78  
Fax: +33 (0) 1 48.63.24.94  
Email: info@fr.metrologic.com

**Metrologic Instruments  
Poland**  
Tel: +48 (22) 545 04 30  
Fax: +48 (22) 545 04 31  
Email: info@pl.metrologic.com

**Metrologic Russia**  
Tel: +7 095 730 7424  
Fax: +7 095 730 7425  
Email: info@ru.metrologic.com

#### Metrologic Asia (Pte) Ltd

**Metrologic Asia (Pte) Ltd**  
Tel : (65) 6842-7155  
Fax : (65) 6842-7166  
Email: info@sg.metrologic.com

**MTLG Auto ID Instruments  
(Shanghai) Co., Ltd**  
Tel: 86-21-58692780  
Fax: 86-21-58692782  
Email: info@cn.metrologic.com

**Suzhou Sales Office**  
Tel: 86-512-67622550  
Fax: 86-512-67622560  
Email: info@cn.metrologic.com

**Guangzhou Sales Office**  
Tel: 86-20-38823476  
Fax: 86-20-38823477  
Email: info@cn.metrologic.com

**Chengdu Sales Office**  
Tel/Fax: 86 28 86200109  
Email: info@cn.metrologic.com

**Beijing Sales Office**  
Tel/Fax: 86 10 82253472  
Email: info@cn.metrologic.com

**India Sales Office**  
Tel: +91 80 51256718  
Fax: +91 80 51256719  
Email: info@in.metrologic.com

**Metrologic Indonesia**  
Tel: 62 21 7360682  
Fax: 62 21 7360662  
Email:  
a.herdian@id.metrologic.com

**Taiwan Sales Office**  
Tel: 886-2-2351 0125  
Email:  
john.cheng@tw.metrologic.com

**Metrologic Thailand**  
Tel: 661-814-2352

**Metrologic Japan Co., Ltd.**  
Tel: 81-3-3839-8511  
Fax: 81-3-3839-8519  
Email: info@jp.metrologic.com

**Korea Sales Office**  
Tel: 82-2-6205-5379  
Fax: 82-2-3444-3980  
Email:  
Scott.lee@kr.metrologic.com

November 2005

Printed in the USA



00 - 02407G