



NOVUM, spol. s r.o.

P r a h a

28. pluku 483/11, 101 00 Praha 10

Tel.: (+420) 267 997 111

Fax: (+420) 267 997 104

Email: novum@novum.cz

<http://www.novum.cz>

B r n o

Marie Kudeřkové 4294/19, 636 00 Brno

Tel.: (+420) 549 247 113

Fax: (+420) 267 997 104

Email: brno@novum.cz

O p a v a

Holasecká 73/1704, 747 05 Opava 5

Tel.: (+420) 553 623 544

Fax: (+420) 553 628 176

Email: opava@novum.cz


NASTAVENÍ KOMUNIKACE VÁHY

DS - 983 Dialog 6 PORS

TABULKA NASTAVENÍ

1. vstup do specifikace >0< + ← ← ←
2. obsah se mění klávesami ← a ↑
3. uložení registru a skok na další stiskem klávesy >0<
4. uložení specifikace do EEPROM a návrat do vážícího módu klávesou >T<

KABEL RS232 KŘÍŽENÝ

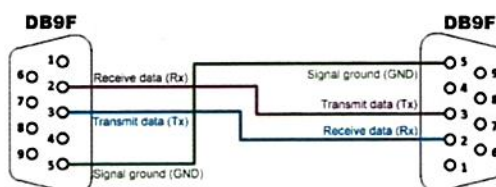

VÝCHOZÍ NASTAVENÍ: + SP21: 0001 , SP24:1001 , SP25: 1001 , SP28:0101, SP29:0001

typ protokolu:

parametry RS-232:

ostatní:

DIALOG 6

9600 / 7 / 1 / EVEN (RTS/CTS handshaking off)

auto power-off není

SPECxx	BIT 3210
00	1011
01	0010
02	0001
03	0001
04	0100
05	0000
06	0001
07	1000



NOVUM, spol. s r.o.

P r a h a

28. pluku 483/11, 101 00 Praha 10

Tel.: (+420) 267 997 111

Fax: (+420) 267 997 104

Email: novum@novum.cz

<http://www.novum.cz>

B r n o

Marie Kudeřkové 4294/19, 636 00 Brno

Tel.: (+420) 549 247 113

Fax: (+420) 267 997 104

Email: brno@novum.cz

O p a v a

Holasecká 73/1704, 747 05 Opava 5

Tel.: (+420) 553 623 544

Fax: (+420) 553 628 176

Email: opava@novum.cz

DALŠÍ MOŽNOSTI NASTAVENÍ

SPECxx	BIT 3	BIT 2	BIT 1	BIT 0
00		Baud rate of RS-232C 000 - 1200 bps 001 - 2400 bps 010 - 4800 bps 011 - 9600 bps 100 - 19200 bps 101 - 38400 bps 110 - Not used 111 - Not used		
01	Stop bit of RS-232C 0 - 1 bit 1 - 2 bit	Data length of RS-232C 0 - 7 bit 1 - 8 bit	Parity of RS-232C 00 - None 01 - Odd 10 - Even 11 - Not used	
02	Data transfer protocol of RS-232C 00000 - Inhibit data transfer 00001 - Type A (Standard stream) 00010 - Type W (Standard manual) 00011 - Type B (Standard command) 00100 - Type C (QUQA TRADING) 00101 - Type D (IBM, HUGIN) 00110 - Type E (ICL OLD) 00111 - Type F (ICL PORTUGAL) 01000 - Type G (ICL ACTUAL) 01001 - Type H (CAS) 01010 - Type I (CAS PORTUGAL) 01011 - Type J (NIXDORF) 01100 - Type K (NCR) 01101 - Type L (MONS) 01110 - Type M (Checkout-Dialog 02/04) 01111 - Type N (DATECS MP50/500) 10000 - Type O (NCI4000) 10001 - Type P (Checkout-Dialog 06) 10010 - Type Q (UNIWEILL, ICL OLD OMRON) 10011 - Type R (ICL ACTUAL OMRON) 10100 - Type S (ICL CS500) 10101 - Type T (DTS) 10110 - Type U (SHARP UP-600/700, American Version) 10111 - Type V (NCI-ECR, Metrologic) 11000 - Type X (WTN) (sending key) 11001 - Type Y (DIA Spanish Version) 11010 - Type Z1 (\$-A, Command Mode) 11011 - Type Z2 (\$-A, Continuous Mode) 11100 - Type Z3 (\$-A, Manual Mode) 11101 - Type Z4 (\$-B, Command Mode) 11110 - Type Z5 (\$-B, Continuous Mode, C Trace) 11111 - Type Z6 (\$-B, Continuous Mode, M Trace) 00000 - Type Z7 (\$-B, Manual Mode) 00001 - Type Z8 (CASIO CE7000) 00010 - Type Z9 (NCI New-A) 00011 - Type Z10 (Novum Delta) 00100 - Type Z11 (PadraoBR) 00101 - Type Z12 (IBM_2012) 00110 - Type Z13 (WINGOR-Dialog 06) 00111 - 11111 - Not used			
03			Data transfer protocol of RS-232C BIT3 of Data transfer protocol of RS-232C	Data transfer protocol of RS-232C BIT4 of Data transfer protocol of RS-232C
04	Interval of time out error of RS-232C 00 - 1 second 01 - 3 second	10 - 5 second 11 - 10 second	Transmission condition of RS-232C 0 - Weight stable 1 - Unconditional	Additional parity code in text of RS-232C 0 - No 1 - Yes
05	Tare Weight in text of RS-232C 0 - No 1 - Yes		Weight sensitivity 00 - Low 01 - Middle 10 - High Middle 11 - High	
06	Calculate and check validity of CS, KW for Checkout-Dialog 06 0 - No 1 - Yes	Key operation for tare in Pos-Weigh-Mode for Checkout-Dialog 02/04 and 06 0 - Allow 1 - Inhibit	Number of status bytes for NCI-ECR 0 - 2 bytes 1 - 4 bytes	0 for valid unit price for Checkout-Dialog 02/04 and 06 0 - Allow 1 - Inhibit
07	Text length in ASCII for Checkout-Dialog 02/04 and 06 0 - 13 digits 1 - Not specified		CS/KW Calculation for Checkout-Dialog 06 00 - Random Number not used for CS/KW 01 - Random Number used for CS/KW 10 - Not used 11 - Not used	